



Nexia Home Intelligence

Setting up a New Account – Set up Wizard



Nexia™ Home Intelligence Set Up Wizard...



Creating a new account

- The account creation and set up process has been improved in the Nexia 2.3 firmware release which went live on 07/31/12.
- This update is a complete overhaul of set up process based on extensive feedback from our users, Nexia subscriber advisory board, and a deeper understanding of optimal Z-wave enrollment and communications.
- The new set up process features a new “enrollment cart” at the heart of this process. The new set up process features a new “enrollment cart” at the heart of this process.

NOTE:

- Depending on what devices the user selects to enroll, the set up process will be slightly different than a user who has different devices. This means the process is customized to each specific user and the devices they are enrolling. It removes any unnecessary steps for devices they are not enrolling.
- Click “Get started here” to create a new account



Nexia – Setting up a New Account




- When setting up a new account, a user will go to www.mynexia.com and click on the link to “Get started here!”

A screenshot of the Nexia Home Intelligence website's login page. The page has a dark grey header with the Nexia logo and the text "NEXIA™ HOME INTELLIGENCE". Below the header, there is a large white area with a background image of a house. On the left side of this area, there is a box with the text "SCHLAGE LINK™ is now Nexia™ Home Intelligence" and the Nexia logo. On the right side, there is a login form with the text "Welcome to Nexia™ Home Intelligence 2.1". The form includes fields for "Username" and "Password", a "Login" button, and a link for "Forgot your username or password? Click here.". At the bottom of the page, there is a dark grey footer with the text "Ready to setup a Nexia™ Home Intelligence system? [Get started here!](#)". The "Get started here!" link is highlighted with a red rectangular box. At the very bottom of the page, there is a footer with the Schlage logo, copyright information "© 2012 Schlage", and links for "Privacy Policy", "Terms and Conditions", "Where to Buy", "Contact Schlage", and "Help".

Terms and Conditions – Option to print

- Subscribers now have the ability to print the Terms & Conditions

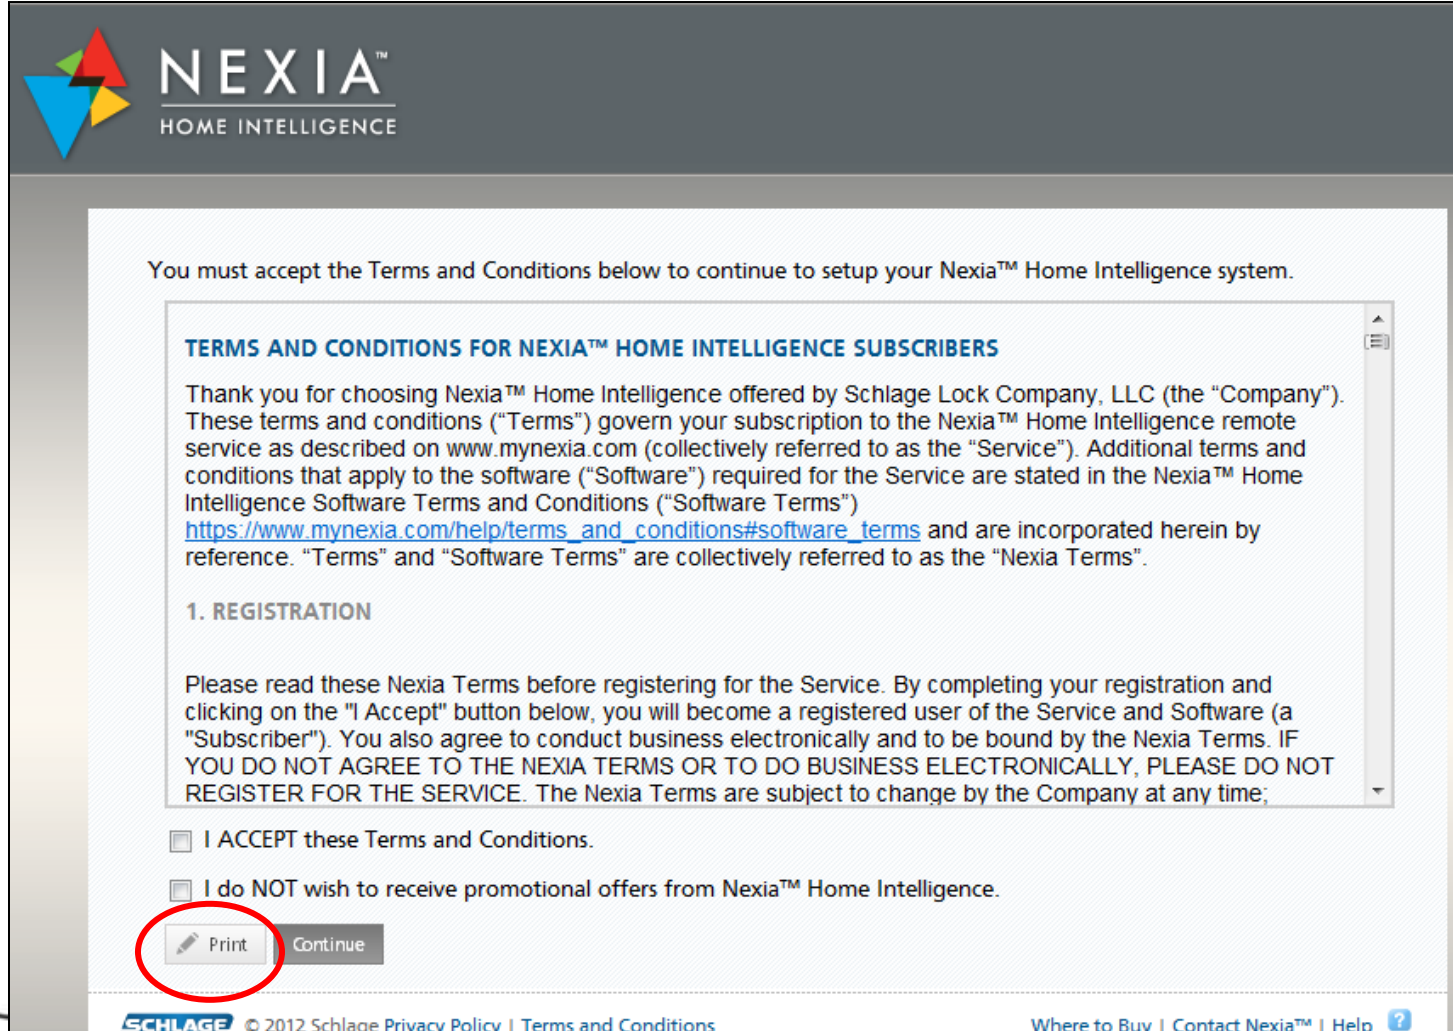

You must accept the Terms and Conditions below to continue to setup your Nexia™ Home Intelligence system.

TERMS AND CONDITIONS FOR NEXIA™ HOME INTELLIGENCE SUBSCRIBERS

Thank you for choosing Nexia™ Home Intelligence offered by Schlage Lock Company, LLC (the "Company"). These terms and conditions ("Terms") govern your subscription to the Nexia™ Home Intelligence remote service as described on www.mynexia.com (collectively referred to as the "Service"). Additional terms and conditions that apply to the software ("Software") required for the Service are stated in the Nexia™ Home Intelligence Software Terms and Conditions ("Software Terms") https://www.mynexia.com/help/terms_and_conditions#software_terms and are incorporated herein by reference. "Terms" and "Software Terms" are collectively referred to as the "Nexia Terms".

1. REGISTRATION

Please read these Nexia Terms before registering for the Service. By completing your registration and clicking on the "I Accept" button below, you will become a registered user of the Service and Software (a "Subscriber"). You also agree to conduct business electronically and to be bound by the Nexia Terms. IF YOU DO NOT AGREE TO THE NEXIA TERMS OR TO DO BUSINESS ELECTRONICALLY, PLEASE DO NOT REGISTER FOR THE SERVICE. The Nexia Terms are subject to change by the Company at any time;


I ACCEPT these Terms and Conditions.

I do NOT wish to receive promotional offers from Nexia™ Home Intelligence.

SCHLAGE © 2012 Schlage Privacy Policy | Terms and Conditions [Where to Buy](#) | [Contact Nexia™](#) | [Help](#) ?

Terms and Conditions

- Continue button is not activated until subscriber accepts the Terms & Conditions
- Accept terms and conditions, then select “continue”

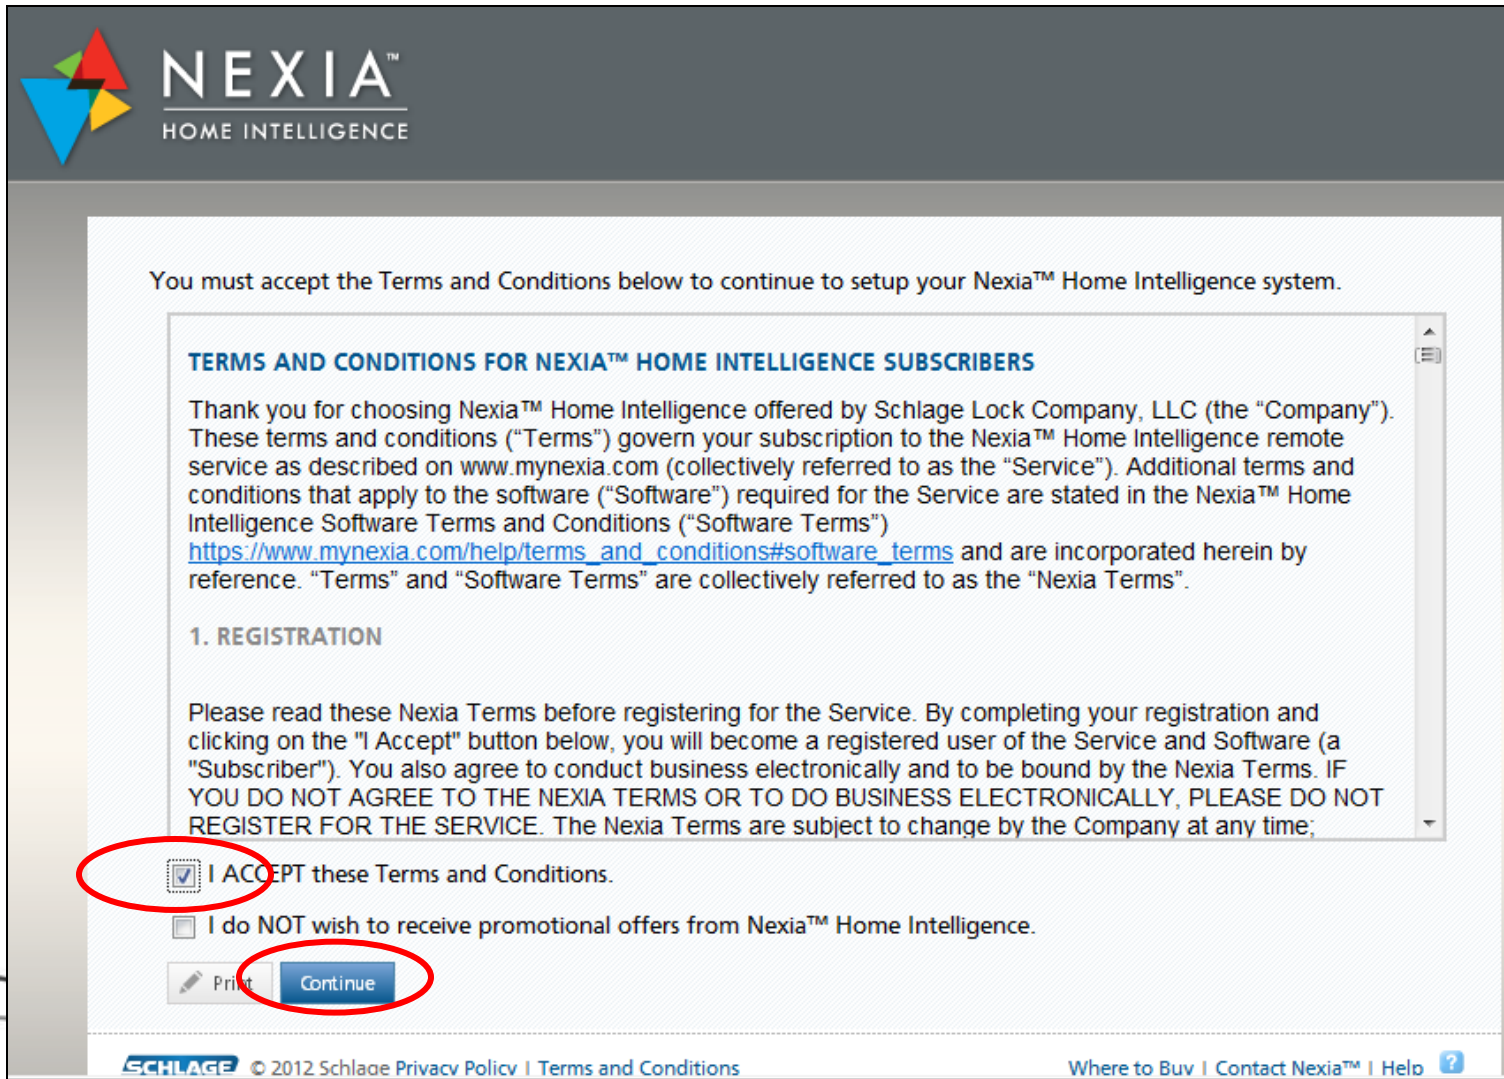

You must accept the Terms and Conditions below to continue to setup your Nexia™ Home Intelligence system.

TERMS AND CONDITIONS FOR NEXIA™ HOME INTELLIGENCE SUBSCRIBERS

Thank you for choosing Nexia™ Home Intelligence offered by Schlage Lock Company, LLC (the “Company”). These terms and conditions (“Terms”) govern your subscription to the Nexia™ Home Intelligence remote service as described on www.mynexia.com (collectively referred to as the “Service”). Additional terms and conditions that apply to the software (“Software”) required for the Service are stated in the Nexia™ Home Intelligence Software Terms and Conditions (“Software Terms”) https://www.mynexia.com/help/terms_and_conditions#software_terms and are incorporated herein by reference. “Terms” and “Software Terms” are collectively referred to as the “Nexia Terms”.

1. REGISTRATION

Please read these Nexia Terms before registering for the Service. By completing your registration and clicking on the “I Accept” button below, you will become a registered user of the Service and Software (a “Subscriber”). You also agree to conduct business electronically and to be bound by the Nexia Terms. IF YOU DO NOT AGREE TO THE NEXIA TERMS OR TO DO BUSINESS ELECTRONICALLY, PLEASE DO NOT REGISTER FOR THE SERVICE. The Nexia Terms are subject to change by the Company at any time;


I ACCEPT these Terms and Conditions.

I do NOT wish to receive promotional offers from Nexia™ Home Intelligence.

SCHLAGE © 2012 Schlage Privacy Policy | Terms and Conditions [Where to Buy](#) | [Contact Nexia™](#) | [Help](#) ?

Account Set Up

- Standard account setup information

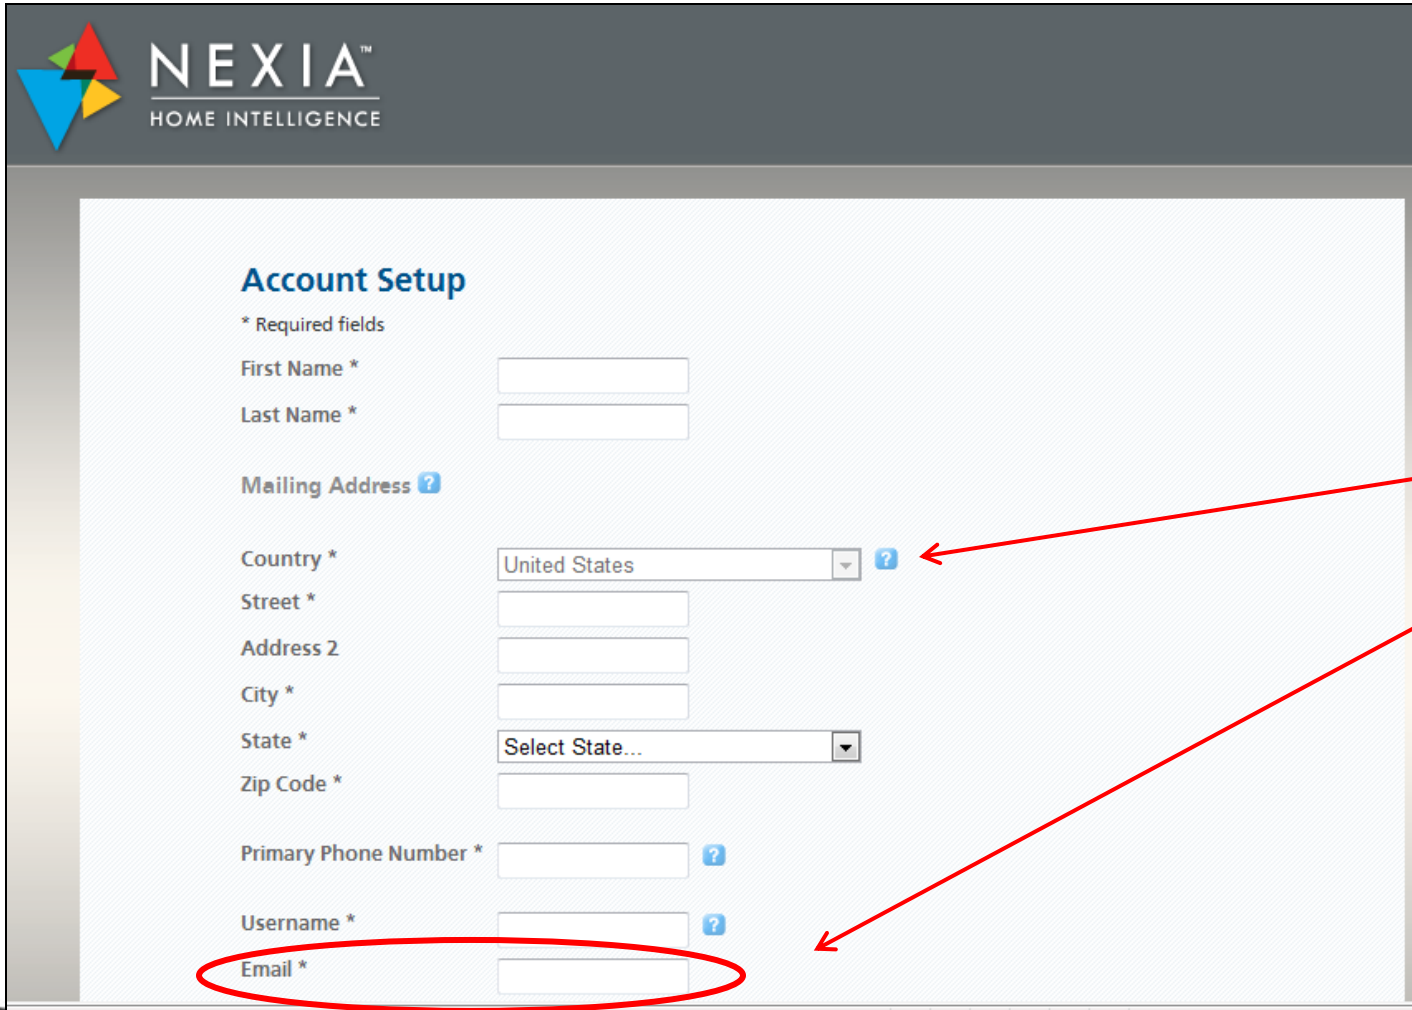

Account Setup

* Required fields

First Name *

Last Name *

Mailing Address ?

Country * ?

Street *

Address 2

City *

State *

Zip Code *

Primary Phone Number * ?


Username * ?

Email *

- New “question icons” are included by FAQs. Scroll over the blue question mark box to get more info
- This email is used for confirmation. This should be the “account owner’s” email.
- Before finishing account set up, the subscriber will need to access this email and click on a link to confirm their account.

Purchase Information

- Enter location and date of purchase
- This information is used to help us work with our dealers and channel partners.
 - Examples: Examining lag between purchase and account set up, satisfaction compared by purchase location, specific communications based on purchase location.

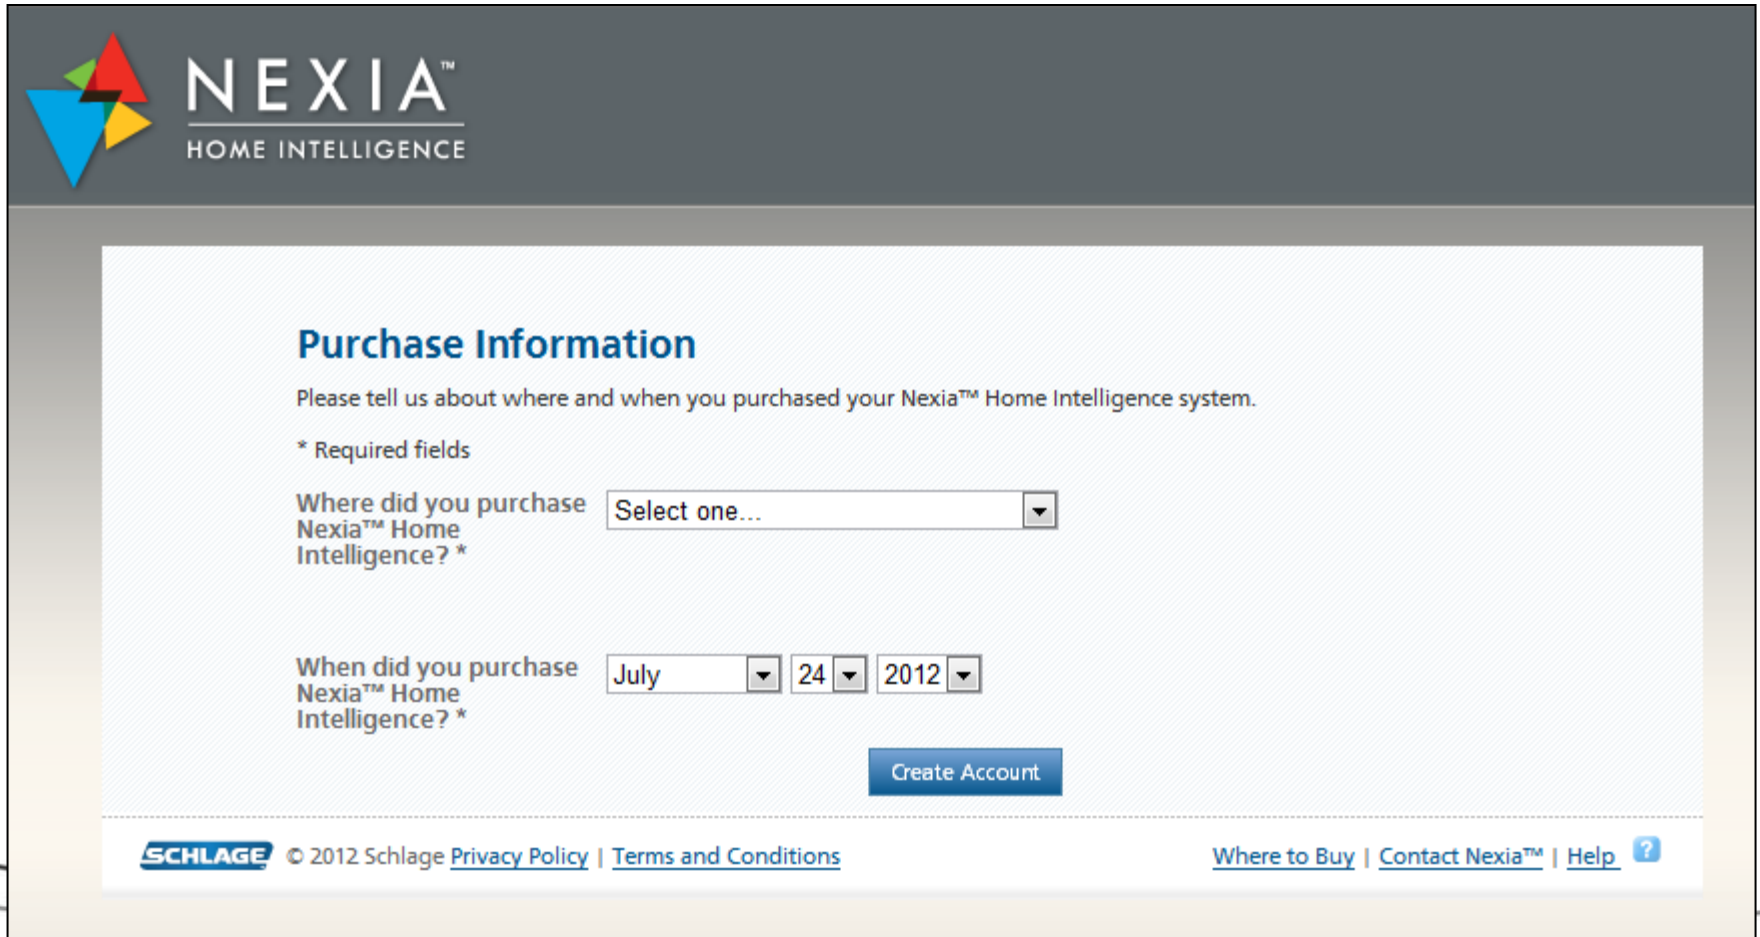A screenshot of a web form titled "Purchase Information" for Nexia Home Intelligence. The form is set against a light gray background with a subtle dot pattern. At the top left of the form area is the Nexia Home Intelligence logo. Below the title, there is a short instruction: "Please tell us about where and when you purchased your Nexia™ Home Intelligence system." A note indicates that the following fields are required. The first field is a dropdown menu labeled "Where did you purchase Nexia™ Home Intelligence? *" with the text "Select one..." and a downward arrow. The second field is a date selector labeled "When did you purchase Nexia™ Home Intelligence? *" with three separate dropdown menus for the month (currently showing "July"), day (currently showing "24"), and year (currently showing "2012"). A blue "Create Account" button is positioned below the date fields. At the bottom of the form, there is a footer containing the Schlage logo, copyright information for 2012, and links to the Privacy Policy, Terms and Conditions, Where to Buy, Contact Nexia™, and Help (with a question mark icon).

Email Confirmation

- Confirmation email is sent to the Nexia subscriber's email account that was entered on previous screen.
- Login to email account and click on link to complete account activation.



Congratulations! You are one step closer to connecting with your home!



 
An email containing an activation link has been sent to you at **(Subscriber's @email.com)** You must click this link to complete the account activation process.

Please check your email. If you do not see this email within the next few minutes, please check your spam folder. You can call technical support at 877-288-7707 for further assistance.

Email Confirmation – Click on link



- Open the email from Nexia™ Home Intelligence with a link to confirm account and complete the activation process.
 - This is a new look and feel versus the prior email that went to new users.

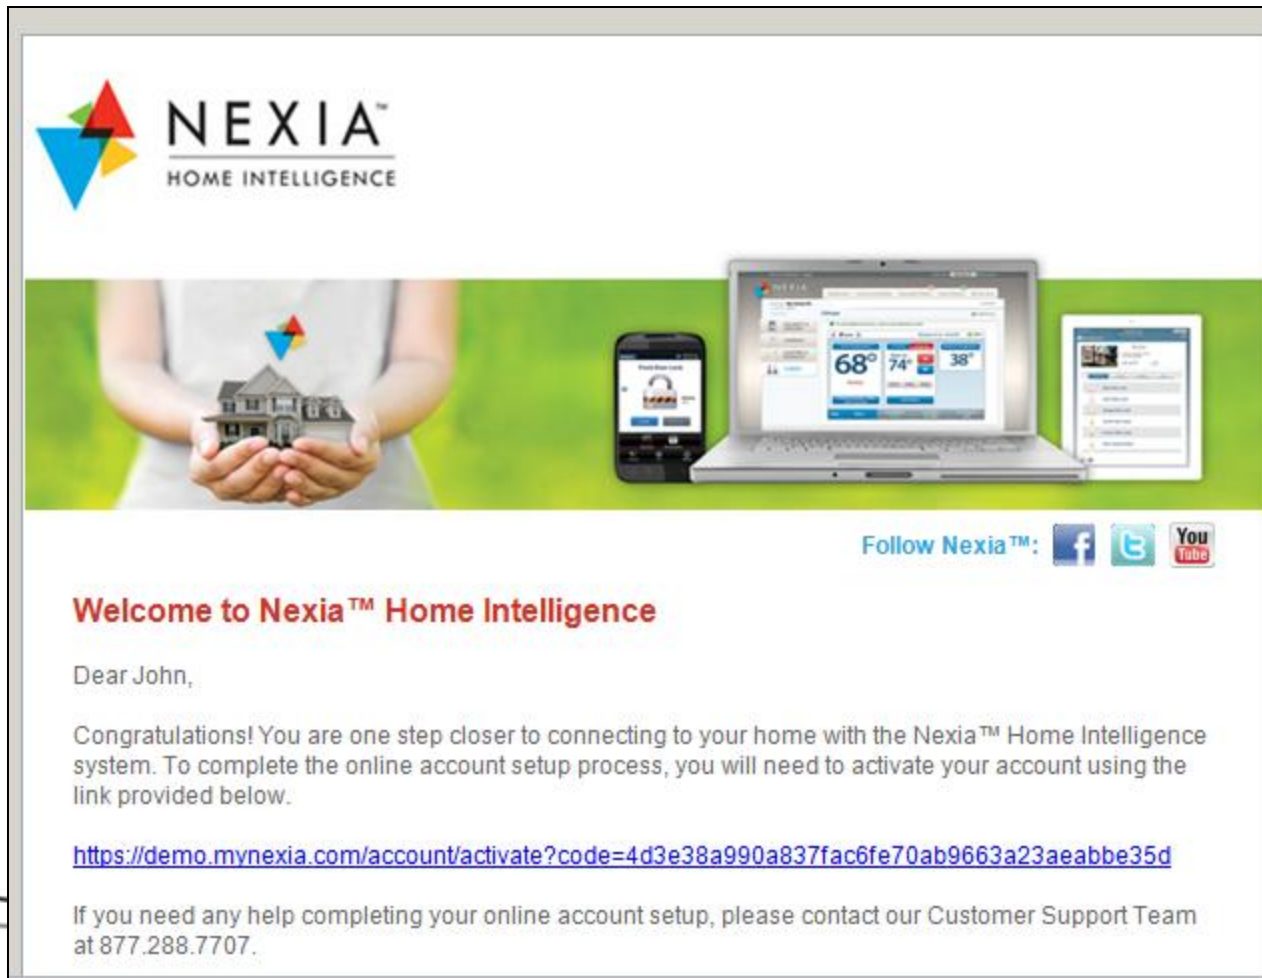

Log in to Nexia™ Home Intelligence Account




- Clicking the email link opens the login page.
- Enter the username and password that was entered on the previous screens


A screenshot of the Nexia Home Intelligence login page. The page has a light gray background with a subtle pattern. On the left, there is a large graphic with the text "SCHLAGE LINK™ is now Nexia™ Home Intelligence" at the top, a house image, and the Nexia Home Intelligence logo below. On the right, the text "Welcome to Nexia™ Home Intelligence" is displayed. Below this, a message reads: "Congratulations on creating your Nexia™ Home Intelligence account! Please login to finish the account setup process and start connecting with your home." Underneath the message are two input fields: "Username" and "Password", both of which are circled in red. Below the input fields is a blue "Login" button. At the bottom of the main content area, there is a link: "Forgot your username or password? [Click here.](#)". At the very bottom of the page, there is a footer with the Schlage logo and copyright information: "© 2012 Schlage Privacy Policy | Terms and Conditions", and on the right side, there are links for "Where to Buy | Contact Nexia™ | Help ?".

Home Set-Up

- Enter information about the house where Nexia™ Home Intelligence is installed:
 - Name, Location, and an option to add a picture to be associated with this house if desired.
- Check box to automatically populate the home address if it is the same as the mailing address

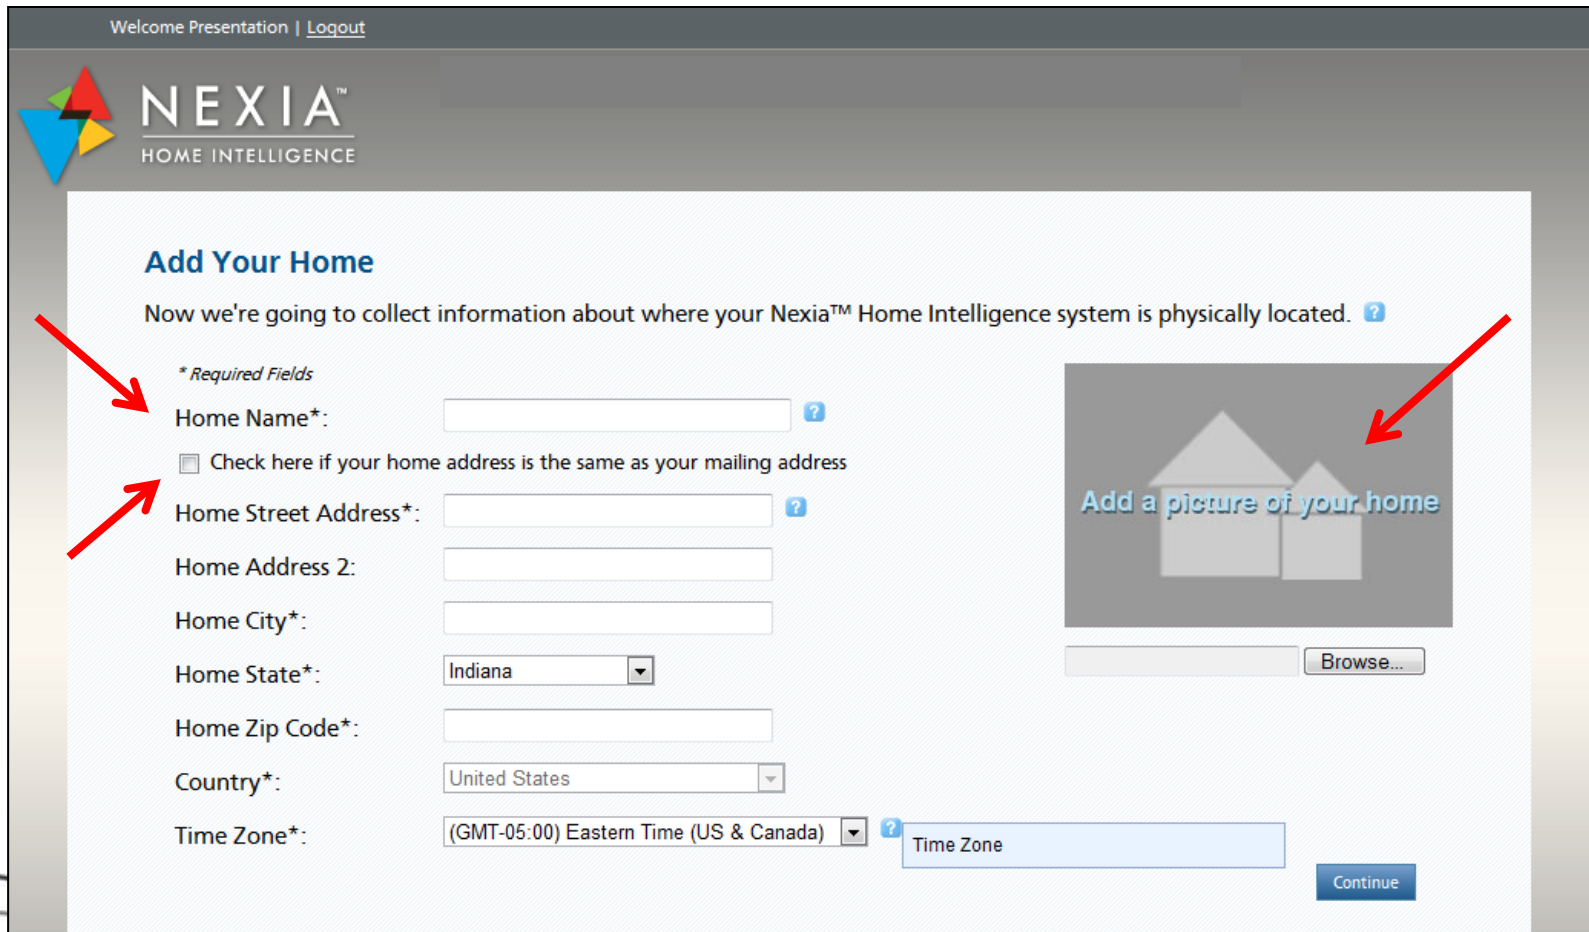

Welcome Presentation | [Logout](#)



Add Your Home

Now we're going to collect information about where your Nexia™ Home Intelligence system is physically located. [?](#)

** Required Fields*

Home Name*: [?](#)

Check here if your home address is the same as your mailing address

Home Street Address*: [?](#)

Home Address 2:

Home City*:

Home State*:

Home Zip Code*:

Country*:

Time Zone*: [?](#)












Set Up Process: Enrollment Cart – Select Items to Enroll



- Select devices to enroll during initial setup.
 - Additional devices can be enrolled at a later time.
- Scroll Over blue question mark icon for additional information about each device


Enrollment Cart

Please select the devices you would like to setup for your home and select Continue.

<input type="checkbox"/>  Nexia Home Bridge ?	<input type="checkbox"/>  Schlage Home Door/Window Sensor ?
<input type="checkbox"/>  Schlage Home Keypad Lock ?	<input type="checkbox"/>  Schlage Home Motion Sensor ?
<input type="checkbox"/>  Schlage Home Dimmer/Appliance Module ?	<input type="checkbox"/> Other Z-Wave Sensor ?
<input type="checkbox"/>  Schlage Home Indoor Camera ?	<input type="checkbox"/> Other Z-Wave Thermostat ?
<input type="checkbox"/>  Schlage Home Outdoor Camera ?	<input type="checkbox"/> Other Z-Wave Lighting Device ?
<input type="checkbox"/>  Trane Home Energy Management Thermostat ?	<input type="checkbox"/> Other Z-Wave Wall Switch and Outlet ?
<input type="checkbox"/>  American Standard AccuLink™ Remote Thermostat ?	
<input type="checkbox"/>  Trane ComfortLink™ II Control ?	
<input type="checkbox"/>  American Standard AccuLink™ Platinum ZV Control ?	

Set Up Process: Enrollment Cart – Example

 - In this example; a Nexia Bridge, Lock, Dimmer Module, Door / Window Sensor, and a Motion Sensor have been selected for enrollment. This determines the instructions and steps on the following screens.
- If a subscribers selects a different combination of devices to enroll, the following screens are designed to match the specific devices selected.
- Click “continue” after appropriate devices are selected

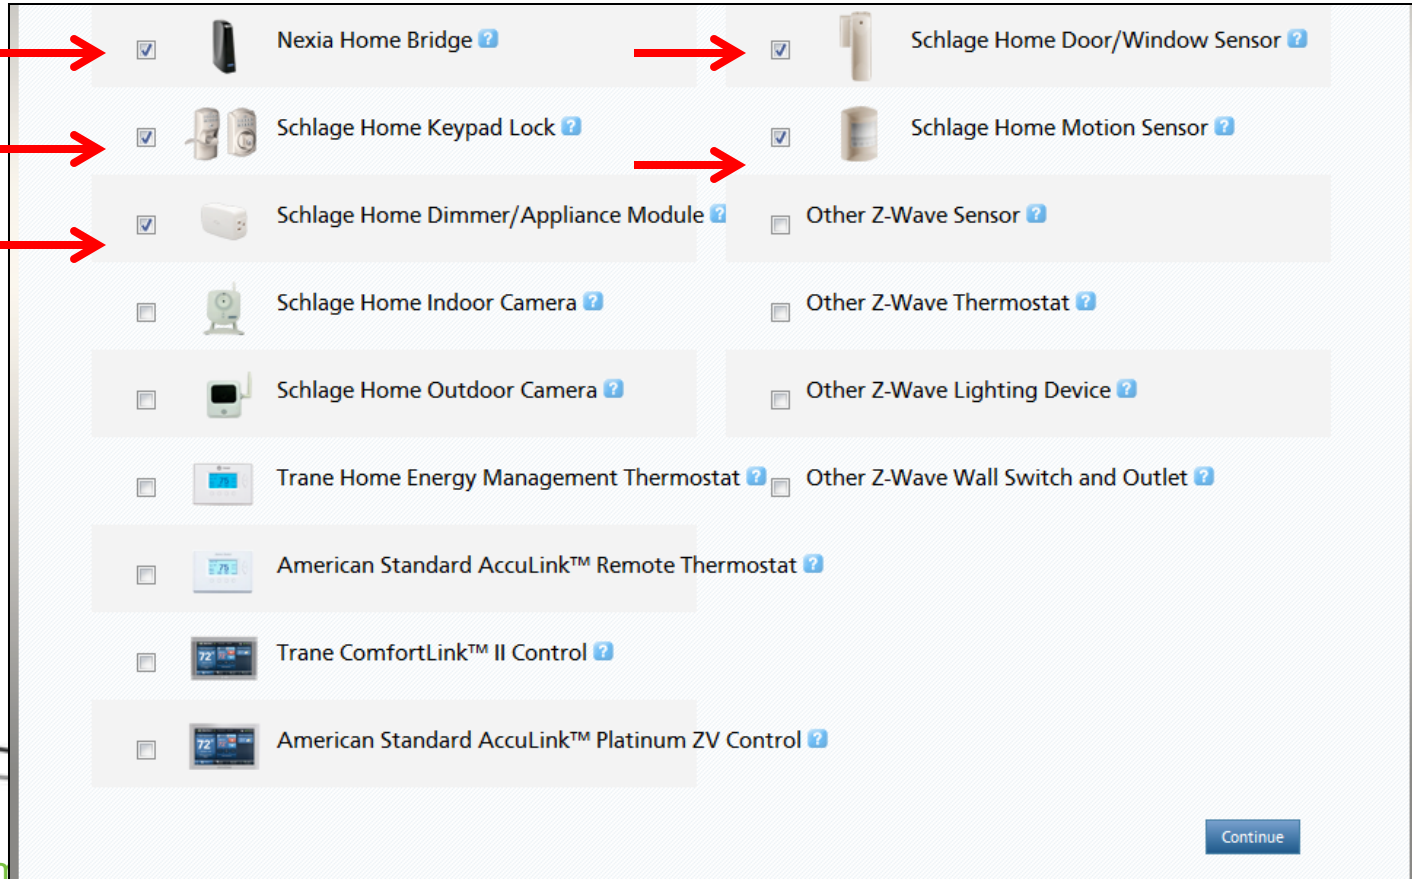






Set Up Process: Enrollment Cart - Confirmation

- Confirm the correct devices have been selected.
 - If yes, click continue
 - If no, click “I need to edit the list of devices I would like to set up for this home”

Enrollment Cart Confirmation

Please review the devices you have selected to setup for this home and select Continue.

-  Nexia Home Bridge ?
-  Schlage Home Keypad Lock ?
-  Schlage Home Dimmer/Appliance Module ?
-  Schlage Home Door/Window Sensor ?
-  Schlage Home Motion Sensor ?

Next Steps ?


- Nexia Home Bridge
- Schlage Home Keypad Lock
- Schlage Home Dimmer/Appliance Module
- Schlage Home Door/Window Sensor
- Schlage Home Motion Sensor
- Subscription Plan and Billing
- Account Setup Complete

I need to edit the list of devices I would like to set up for this home.

Continue

Set Up Process: Bridge – Getting Started

- In this example, the first step is adding a Bridge to the house
 - If the bridge was not selected in the enrollment cart, the set up wizard will move on to another device.
 - The bridge is not required for Schlage Cameras, American Standard AccuLink™ Platinum ZV Control, or the Trane ComfortLink™ II Control. These devices communicate directly to the Nexia subscriber’s wireless router.
 - The bridge is required for other Z-wave devices like locks, light modules, and the 400B and 500B thermostats
- Follow the onscreen instructions to confirm items required

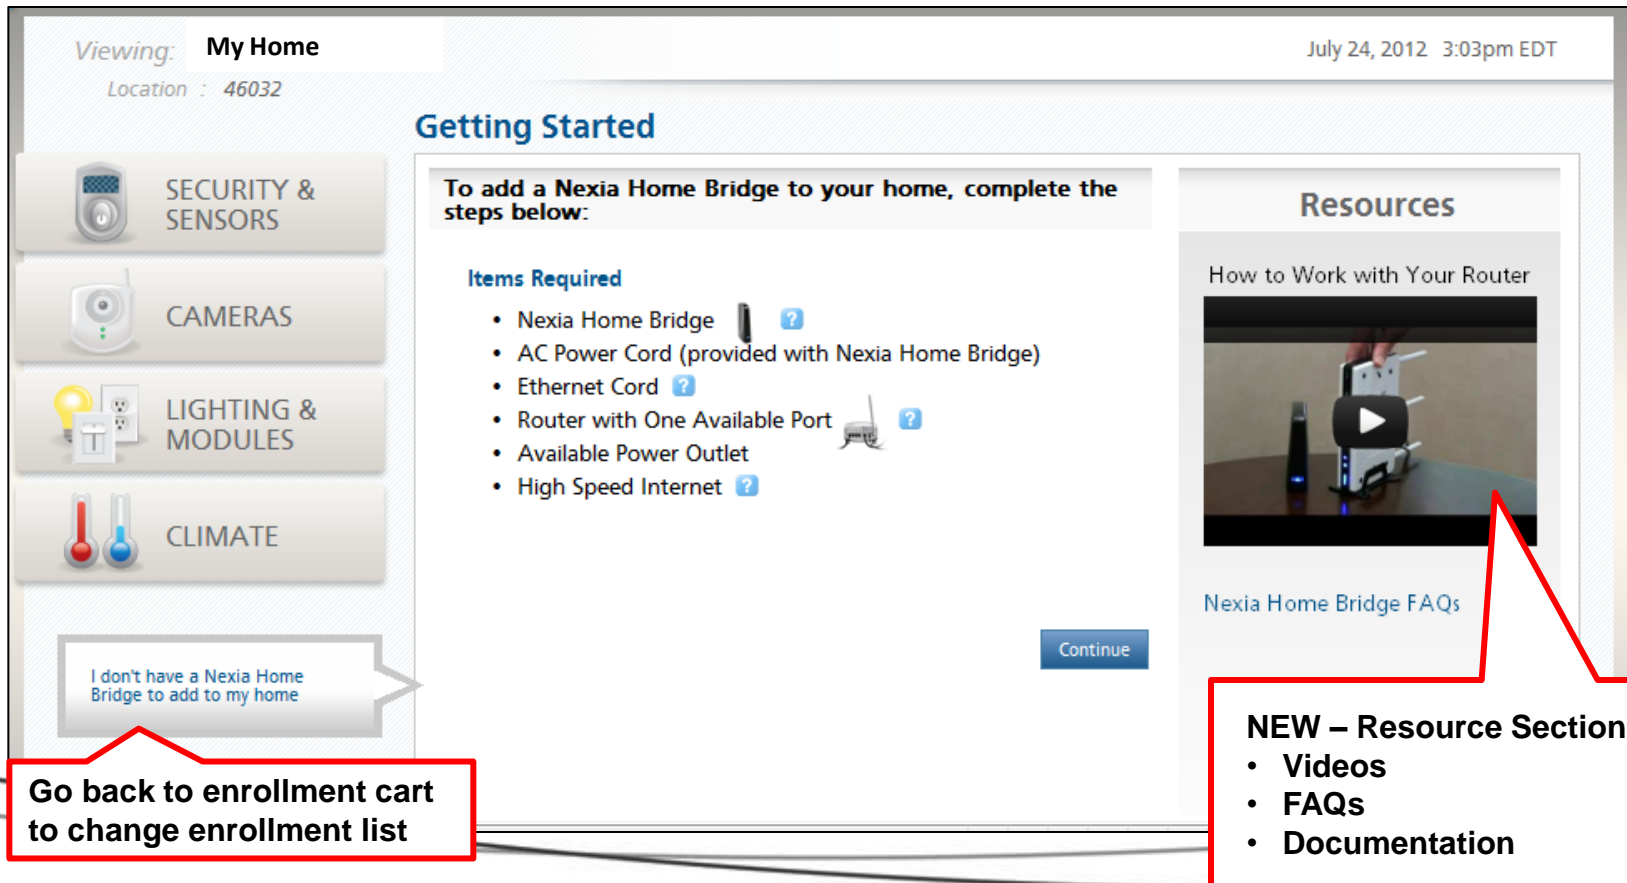

Viewing: **My Home**
Location : 46032

July 24, 2012 3:03pm EDT

Getting Started

To add a Nexia Home Bridge to your home, complete the steps below:

Items Required

- Nexia Home Bridge
- AC Power Cord (provided with Nexia Home Bridge)
- Ethernet Cord
- Router with One Available Port
- Available Power Outlet
- High Speed Internet

[Continue](#)

Resources

How to Work with Your Router

[Nexia Home Bridge FAQs](#)


NEW – Resource Section

- Videos
- FAQs
- Documentation

Go back to enrollment cart to change enrollment list

Set Up Process: Bridge – Device Enrollment Instructions

- Follow the onscreen instructions:
 - Enter the Bridge MAC ID in the box provided, click on the Continue button, and then connect the Nexia bridge to the router and the A.C. power adaptor

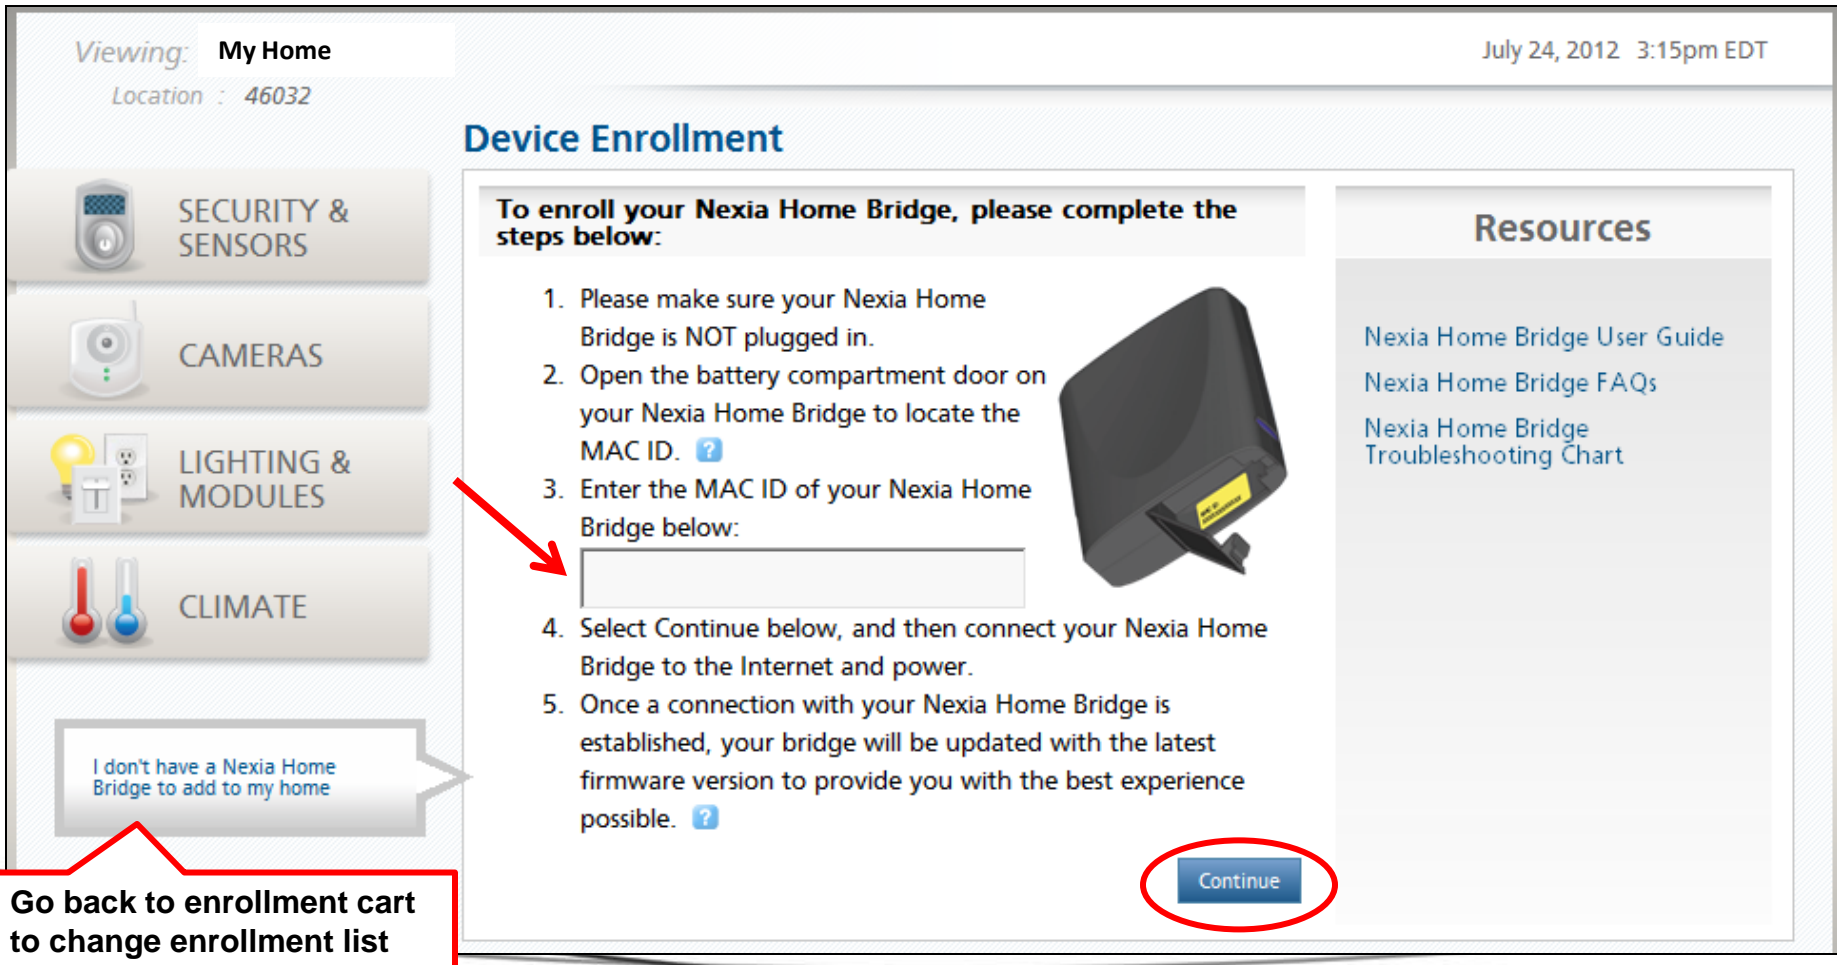

The screenshot shows the 'Device Enrollment' screen in the Nexia Home app. At the top left, it says 'Viewing: My Home' and 'Location: 46032'. At the top right, the date and time are 'July 24, 2012 3:15pm EDT'. On the left side, there are four menu items: 'SECURITY & SENSORS', 'CAMERAS', 'LIGHTING & MODULES', and 'CLIMATE'. Below these is a button that says 'I don't have a Nexia Home Bridge to add to my home'. The main content area is titled 'Device Enrollment' and contains the following text: 'To enroll your Nexia Home Bridge, please complete the steps below:'. There are five numbered steps: 1. Please make sure your Nexia Home Bridge is NOT plugged in. 2. Open the battery compartment door on your Nexia Home Bridge to locate the MAC ID. 3. Enter the MAC ID of your Nexia Home Bridge below: (with a text input field). 4. Select Continue below, and then connect your Nexia Home Bridge to the Internet and power. 5. Once a connection with your Nexia Home Bridge is established, your bridge will be updated with the latest firmware version to provide you with the best experience possible. To the right of the steps is an image of the Nexia Home Bridge device. At the bottom right of the main content area is a blue 'Continue' button. On the right side of the screen, there is a 'Resources' section with three links: 'Nexia Home Bridge User Guide', 'Nexia Home Bridge FAQs', and 'Nexia Home Bridge Troubleshooting Chart'. A red arrow points from step 3 to the text input field. A red box highlights the 'Continue' button. A red box at the bottom left contains the text 'Go back to enrollment cart to change enrollment list'.

Viewing: My Home
Location : 46032
July 24, 2012 3:15pm EDT

Device Enrollment

To enroll your Nexia Home Bridge, please complete the steps below:

1. Please make sure your Nexia Home Bridge is NOT plugged in.
2. Open the battery compartment door on your Nexia Home Bridge to locate the MAC ID. ?
3. Enter the MAC ID of your Nexia Home Bridge below:
4. Select Continue below, and then connect your Nexia Home Bridge to the Internet and power.
5. Once a connection with your Nexia Home Bridge is established, your bridge will be updated with the latest firmware version to provide you with the best experience possible. ?

[Continue](#)

Resources


- [Nexia Home Bridge User Guide](#)
- [Nexia Home Bridge FAQs](#)
- [Nexia Home Bridge Troubleshooting Chart](#)

I don't have a Nexia Home Bridge to add to my home

Go back to enrollment cart to change enrollment list

Set Up Process: Bridge – Activation

- Information box shows progress of activating bridge
 - This will process checks and updates the firmware on the bridge to ensure it is the current version latest version

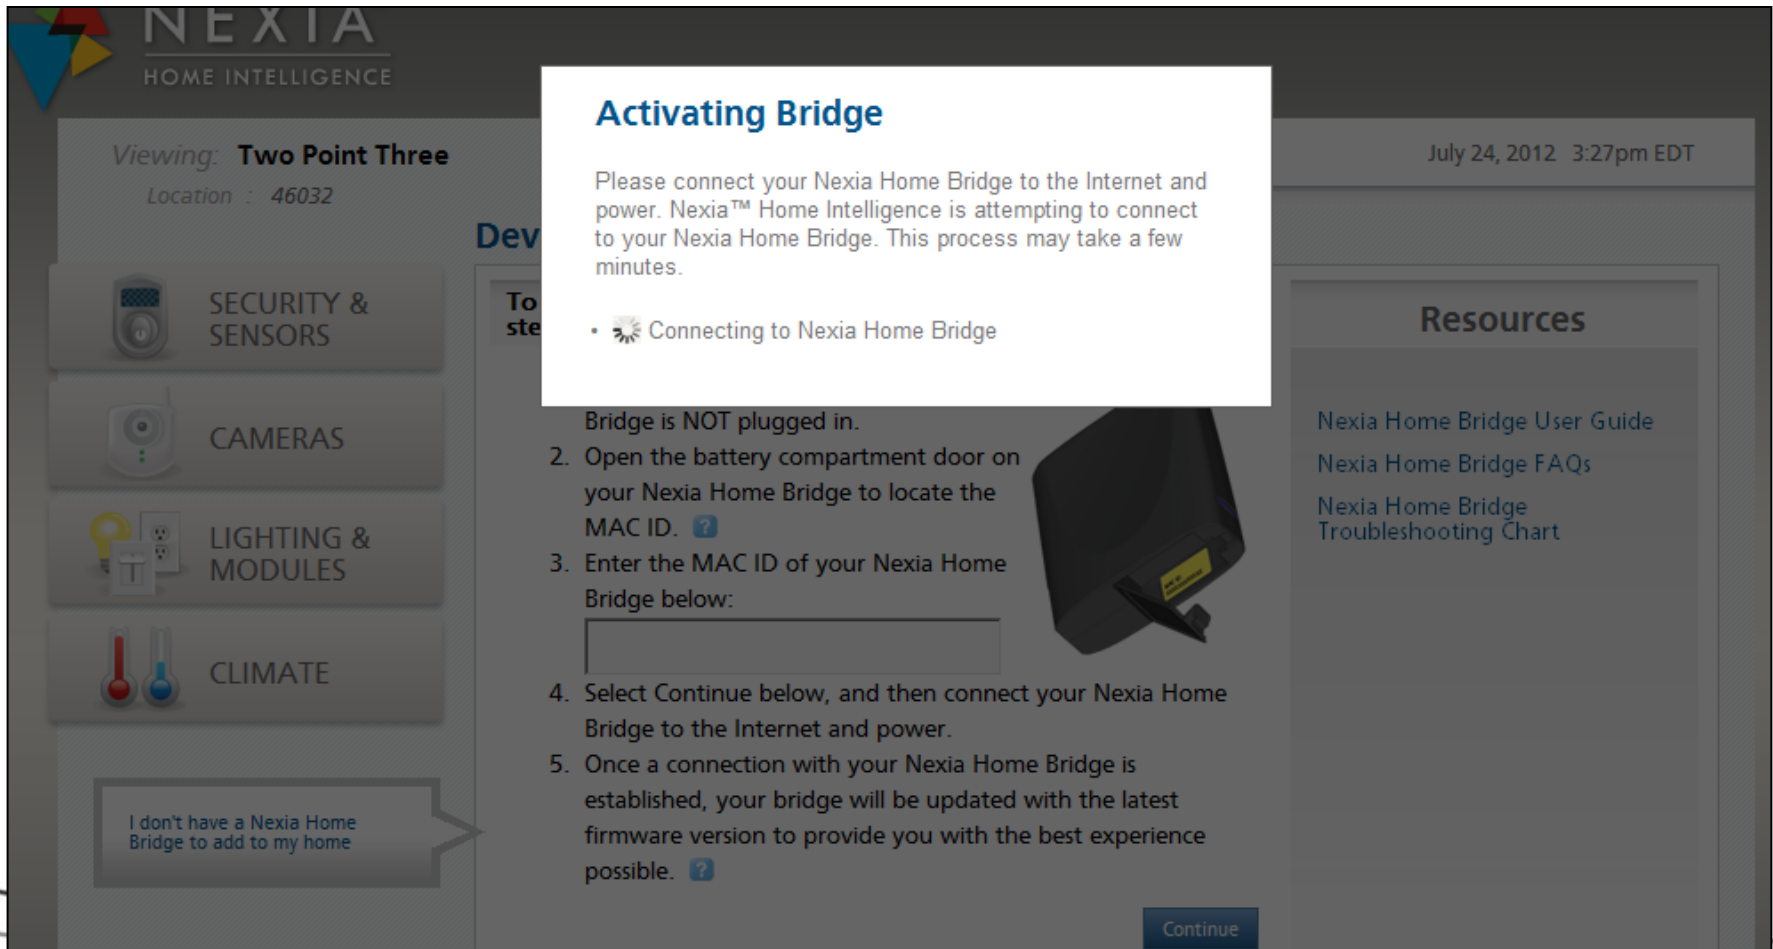


NEXIA
HOME INTELLIGENCE

Viewing: **Two Point Three**
Location : 46032



July 24, 2012 3:27pm EDT

Activating Bridge

Please connect your Nexia Home Bridge to the Internet and power. Nexia™ Home Intelligence is attempting to connect to your Nexia Home Bridge. This process may take a few minutes.

-  Connecting to Nexia Home Bridge

Bridge is NOT plugged in.

2. Open the battery compartment door on your Nexia Home Bridge to locate the MAC ID. 
3. Enter the MAC ID of your Nexia Home Bridge below:
4. Select Continue below, and then connect your Nexia Home Bridge to the Internet and power.
5. Once a connection with your Nexia Home Bridge is established, your bridge will be updated with the latest firmware version to provide you with the best experience possible. 

[Continue](#)


Resources

- [Nexia Home Bridge User Guide](#)
- [Nexia Home Bridge FAQs](#)
- [Nexia Home Bridge Troubleshooting Chart](#)

I don't have a Nexia Home Bridge to add to my home

Set Up Process: Bridge - Confirmation

- “Congratulations” screen gives confirmation the bridge has been successfully added to the account
- Follow the onscreen instructions

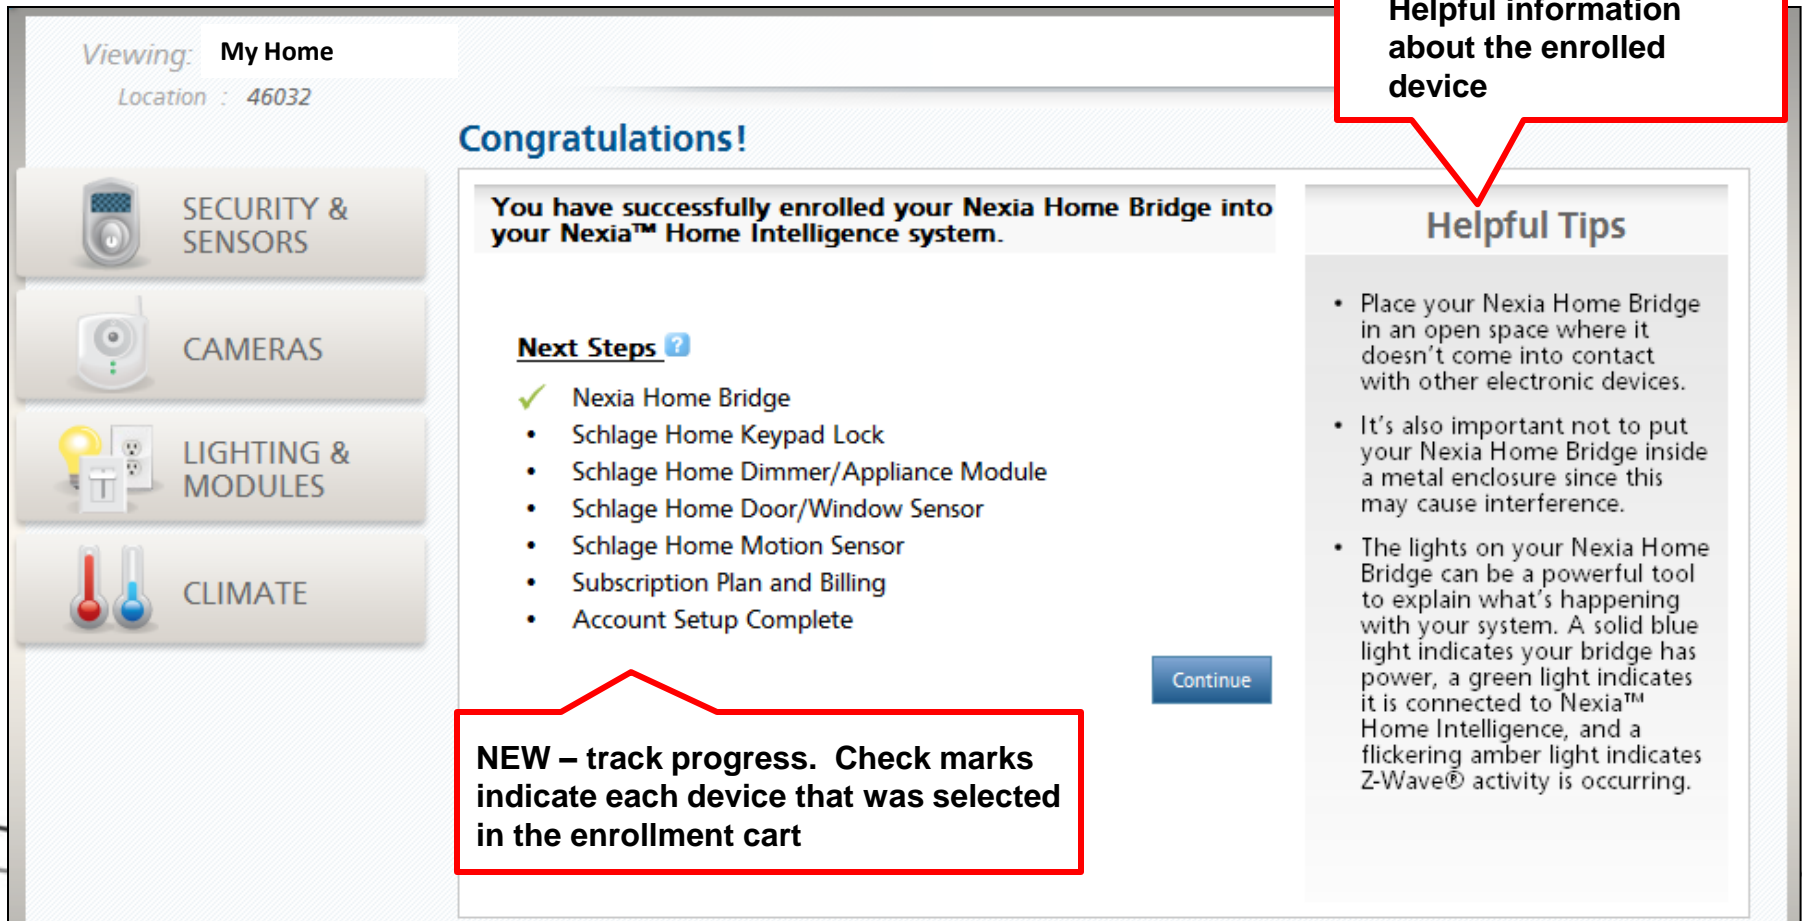

Viewing: My Home
Location : 46032

Congratulations!

You have successfully enrolled your Nexia Home Bridge into your Nexia™ Home Intelligence system.

Next Steps ?

- ✓ Nexia Home Bridge
- Schlage Home Keypad Lock
- Schlage Home Dimmer/Appliance Module
- Schlage Home Door/Window Sensor
- Schlage Home Motion Sensor
- Subscription Plan and Billing
- Account Setup Complete

Continue

Helpful Tips

- Place your Nexia Home Bridge in an open space where it doesn't come into contact with other electronic devices.
- It's also important not to put your Nexia Home Bridge inside a metal enclosure since this may cause interference.
- The lights on your Nexia Home Bridge can be a powerful tool to explain what's happening with your system. A solid blue light indicates your bridge has power, a green light indicates it is connected to Nexia™ Home Intelligence, and a flickering amber light indicates Z-Wave® activity is occurring.

NEW – Helpful Tips
Helpful information about the enrolled device


NEW – track progress. Check marks indicate each device that was selected in the enrollment cart

Set Up Process: Lock – Getting Started

- In this example, the next step is to enroll the lock
- Follow the onscreen instructions to confirm items required

NEW – Resource Section

- Videos
- FAQs
- Documentation

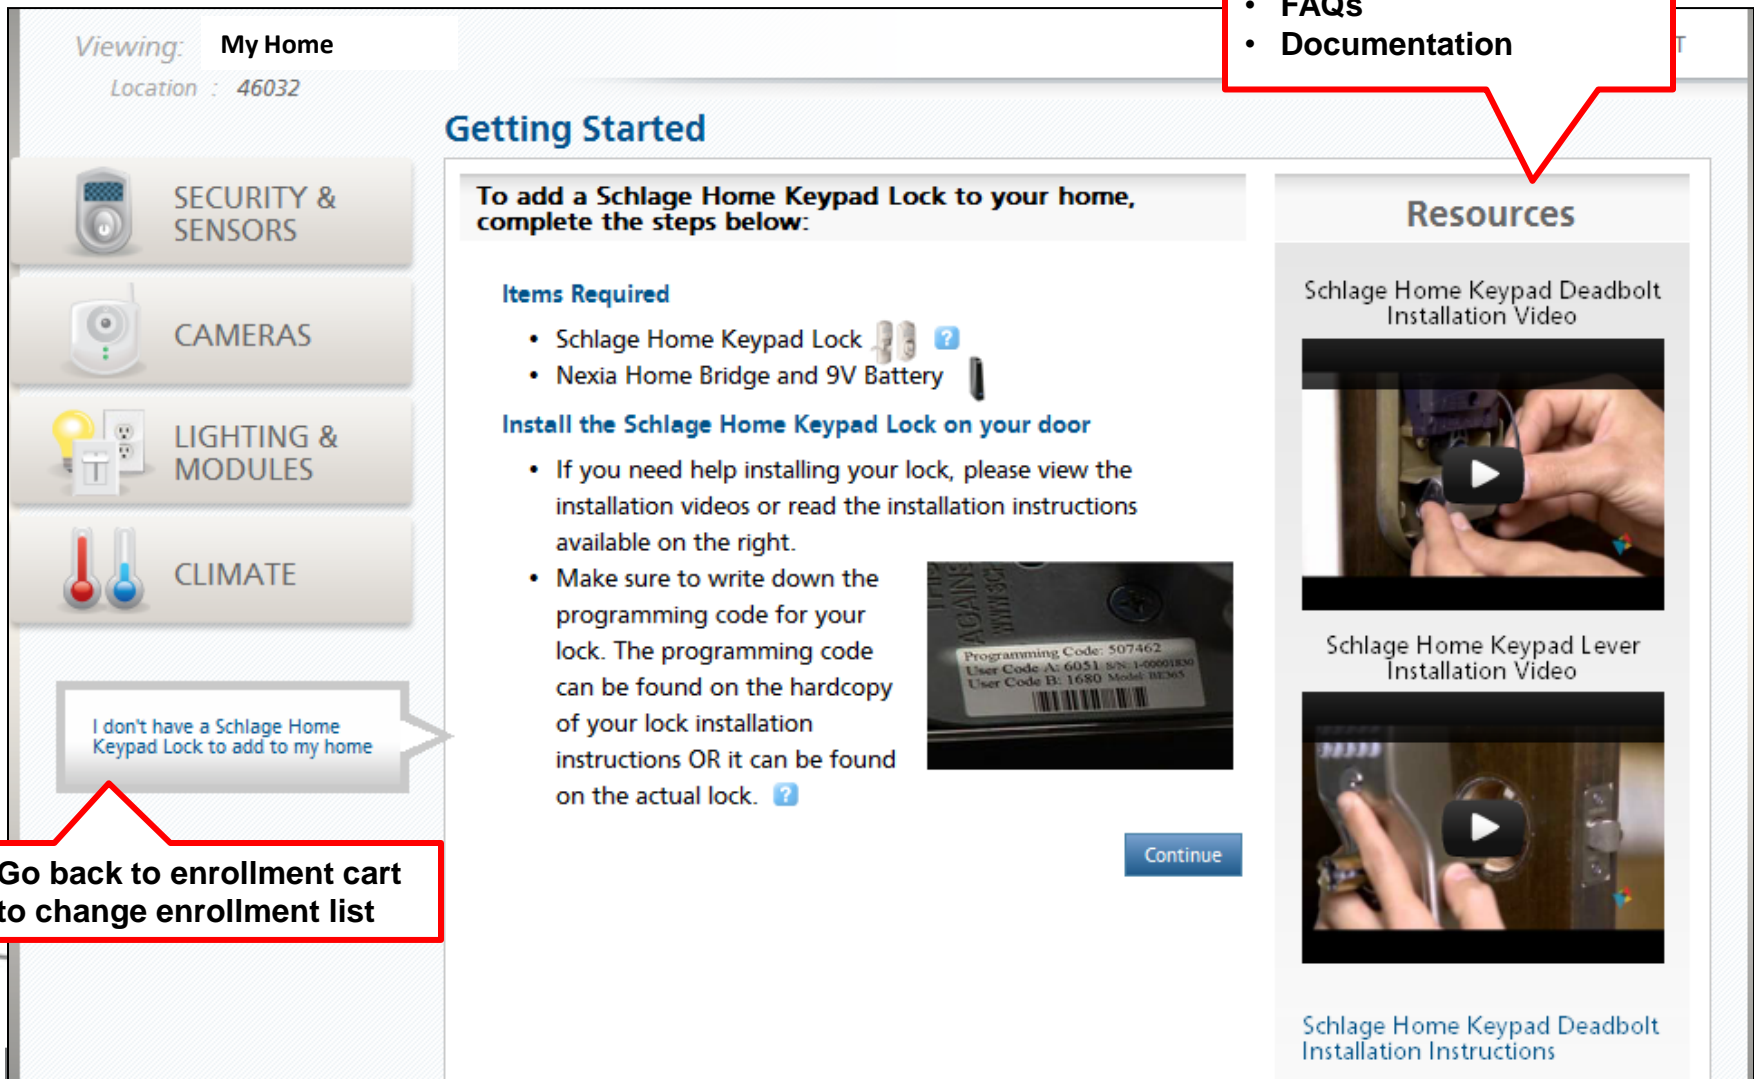

Viewing: My Home
Location : 46032

Getting Started

To add a Schlage Home Keypad Lock to your home, complete the steps below:

Items Required

- Schlage Home Keypad Lock
- Nexia Home Bridge and 9V Battery

Install the Schlage Home Keypad Lock on your door

- If you need help installing your lock, please view the installation videos or read the installation instructions available on the right.
- Make sure to write down the programming code for your lock. The programming code can be found on the hardcopy of your lock installation instructions OR it can be found on the actual lock.

Resources

- Schlage Home Keypad Deadbolt Installation Video
- Schlage Home Keypad Lever Installation Video
- Schlage Home Keypad Deadbolt Installation Instructions

Continue

I don't have a Schlage Home Keypad Lock to add to my home

Go back to enrollment cart to change enrollment list

Programming Code: 507462
User Code A: 6051 SN: 1-00001830
User Code B: 1680 Model: BE365

Set Up Process: Lock – Device Enrollment Instructions

- After the lock is installed on the door, the next step is Lock enrollment
- Follow the onscreen instructions to enroll the lock

Viewing: **My Home**
Location : 46032

July 24, 2012 3:48pm EDT

Device Enrollment


To enroll your Schlage Home Keypad Lock, please complete the steps below:

1. Disconnect the Nexia Home Bridge from the Internet and AC power. Install a fresh 9V battery into your Nexia Home Bridge.
2. Hold the Nexia Home Bridge within six feet of your Schlage Home Keypad Lock. Keep the Nexia Home Bridge in this position during the entire enrollment process. Press and release the plus (+) button on your Nexia Home Bridge. The orange LED on the Nexia Home Bridge will blink.
3. On your lock, enter the six-digit programming code. Wait for the lock to beep three times and the Schlage button to flash orange three times. ?
4. Press the Schlage button, followed by the 0 (zero) button. The Schlage button will begin to flash orange.
5. If your lock has successfully enrolled, the Schlage button will flash green. If the enrollment was unsuccessful, the Schlage button will flash red.
6. Observe the lights on your bridge. The orange light will blink while enrollment is taking place. The enrollment process is complete when the orange light becomes solid.
7. Remove the 9V battery from your bridge. Reconnect your bridge to the Internet and AC power.

[Continue](#)

Resources

Schlage Home Keypad Lock Enrollment Video



[Schlage Home Keypad Lock User Guide](#)

[Schlage Home Keypad Lock FAQs](#)

NEW – Resource Section


- Videos
- FAQs
- Documentation

I don't have a Schlage Home Keypad Lock to add to my home

Go back to enrollment cart to change enrollment list

Set Up Process: Lock - Enrollment

- Information box shows progress of enrolling the lock to the bridge

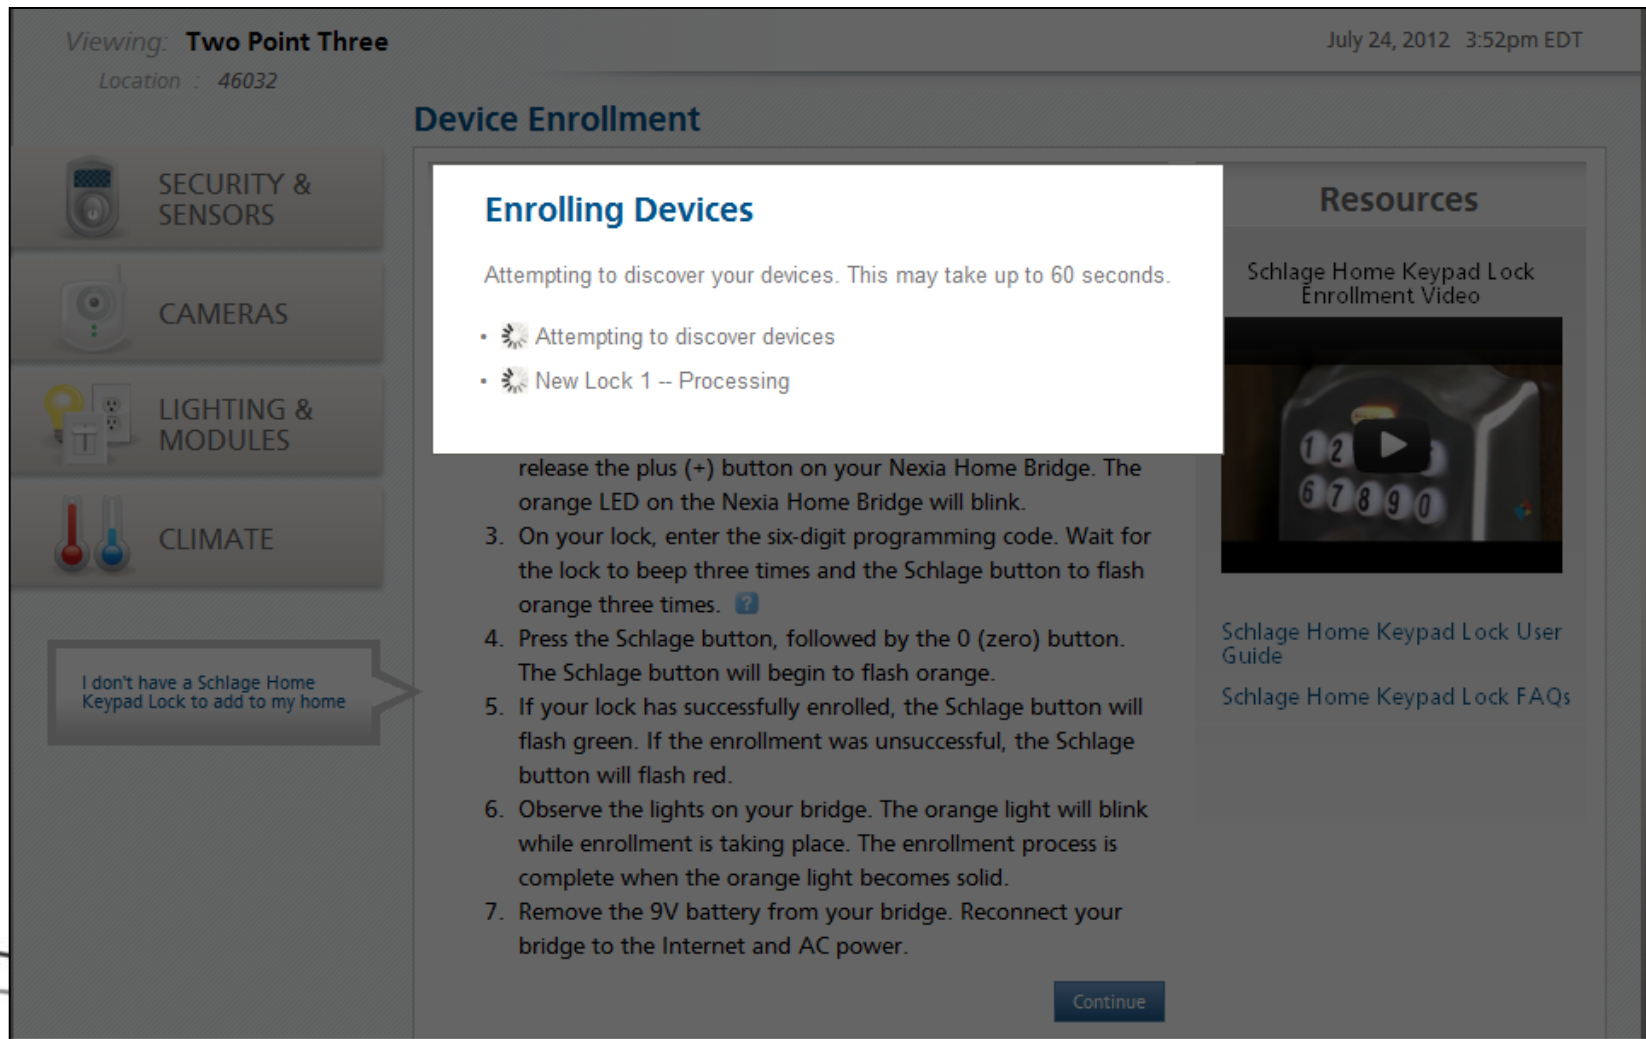

Viewing: **Two Point Three**
Location : 46032
July 24, 2012 3:52pm EDT

Device Enrollment

Enrolling Devices

Attempting to discover your devices. This may take up to 60 seconds.

- Attempting to discover devices
- New Lock 1 -- Processing


release the plus (+) button on your Nexia Home Bridge. The orange LED on the Nexia Home Bridge will blink.

- On your lock, enter the six-digit programming code. Wait for the lock to beep three times and the Schlage button to flash orange three times. ?
- Press the Schlage button, followed by the 0 (zero) button. The Schlage button will begin to flash orange.
- If your lock has successfully enrolled, the Schlage button will flash green. If the enrollment was unsuccessful, the Schlage button will flash red.
- Observe the lights on your bridge. The orange light will blink while enrollment is taking place. The enrollment process is complete when the orange light becomes solid.
- Remove the 9V battery from your bridge. Reconnect your bridge to the Internet and AC power.

[Continue](#)

Resources

Schlage Home Keypad Lock Enrollment Video



Schlage Home Keypad Lock User Guide

Schlage Home Keypad Lock FAQs

I don't have a Schlage Home Keypad Lock to add to my home

Set Up Process: Lock - Confirmation

- “Congratulations” screen gives confirmation the lock has been successfully added to the account
- Follow the onscreen instructions.
- Enter descriptive name of lock (Example: Front door lock)

NEW – Helpful Tips
 Helpful information about the enrolled device

Viewing: My Home
 Location : 46032

Congratulations!

You have successfully enrolled your Schlage Home Keypad Lock into your Nexia™ Home Intelligence system.

Edit your Schlage Home Keypad Lock name below ?

Schlage Home Keypad Lock Name:

Next Steps ?

- ✓ Nexia Home Bridge
- ✓ Schlage Home Keypad Lock
 - Schlage Home Dimmer/Appliance Module
 - Schlage Home Door/Window Sensor
 - Schlage Home Motion Sensor
- Subscription Plan and Billing
- Account Setup Complete

[Continue](#)

Helpful Tips

- Keep your programming code and two default lock codes for future reference.
- A lock code will allow access to your door for five seconds before the lock returns a locked state.
- After entering a lock code, you can open the door manually once you have seen the Schlage button turn green.
- Your Schlage Home Keypad Lock will send an update on its battery status to Nexia™ Home Intelligence every eight hours. Nexia™ Home Intelligence will send you an alert once your lock's battery level reaches 20%.
- Pressing the Schlage button on your lock will illuminate the keypad to make it easier for nighttime use.


I need to enroll another Schlage Home Keypad Lock in my system.

Go back to enrollment cart to add another lock

NEW – track progress. Check marks indicate each device that was selected in the enrollment cart

Set Up Process: Dimmer Module – Getting Started

- In this example, the next step is to enroll the light dimmer module
- Follow the onscreen instructions to confirm items required

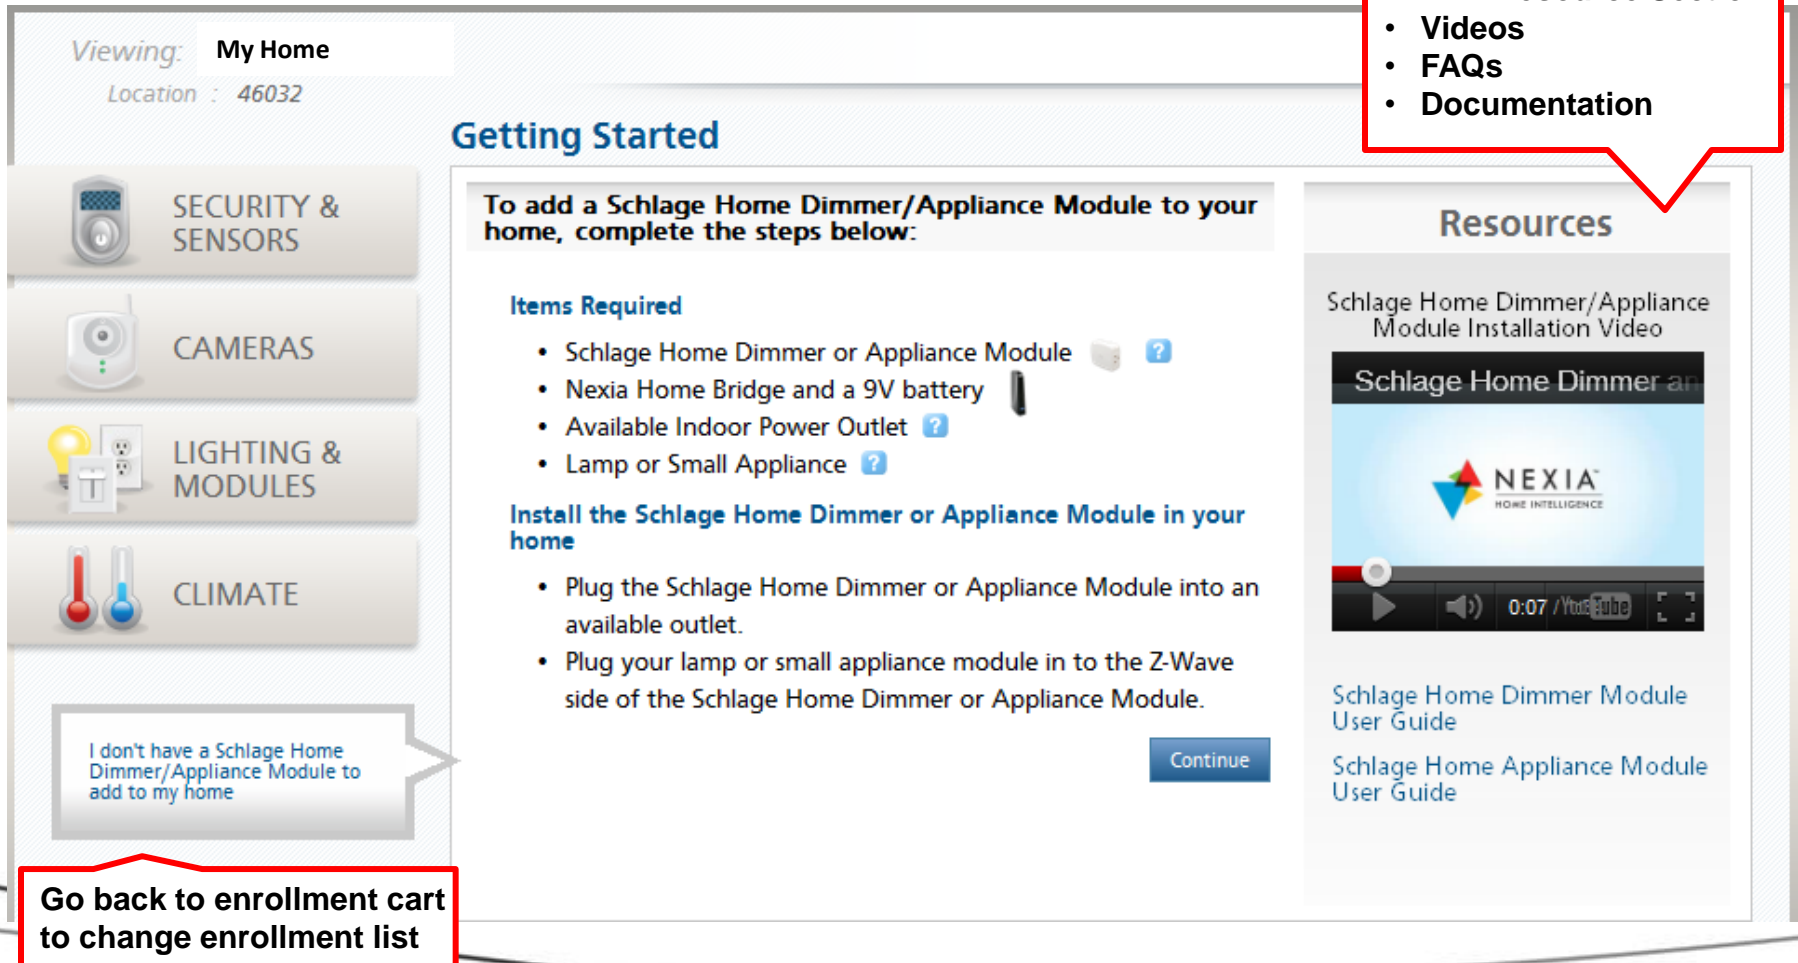



Viewing: My Home
Location : 46032

Getting Started

To add a Schlage Home Dimmer/Appliance Module to your home, complete the steps below:

Items Required

- Schlage Home Dimmer or Appliance Module  ?
- Nexia Home Bridge and a 9V battery 
- Available Indoor Power Outlet ?
- Lamp or Small Appliance ?

Install the Schlage Home Dimmer or Appliance Module in your home

- Plug the Schlage Home Dimmer or Appliance Module into an available outlet.
- Plug your lamp or small appliance module in to the Z-Wave side of the Schlage Home Dimmer or Appliance Module.

[Continue](#)

Resources

- Schlage Home Dimmer/Appliance Module Installation Video
- Schlage Home Dimmer Module User Guide
- Schlage Home Appliance Module User Guide


NEW – Resource Section

- Videos
- FAQs
- Documentation

I don't have a Schlage Home Dimmer/Appliance Module to add to my home

Go back to enrollment cart to change enrollment list

- After the dimmer module is plugged into an outlet, the next step is to enroll the dimmer module
- Follow the onscreen instructions to enroll the dimmer module

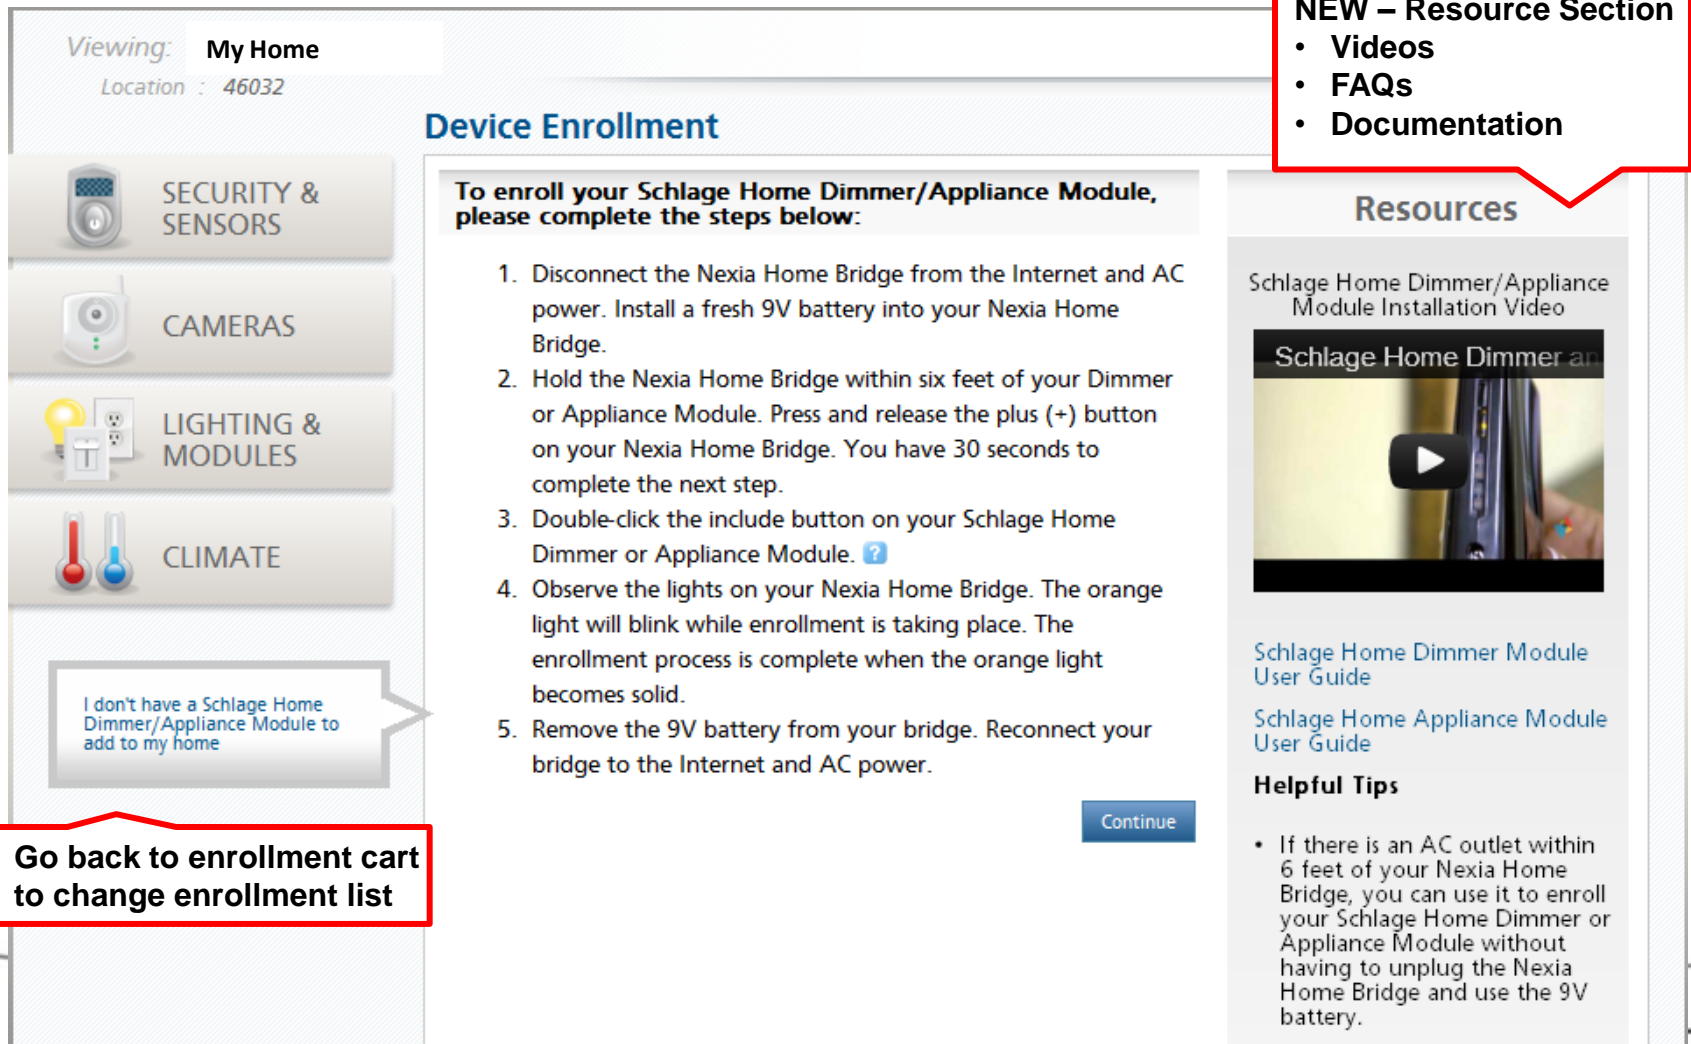

The screenshot displays the 'Device Enrollment' screen in the Nexia Home Intelligence app. At the top, it shows 'Viewing: My Home' and 'Location: 46032'. A left-hand navigation menu includes categories: SECURITY & SENSORS, CAMERAS, LIGHTING & MODULES, and CLIMATE. The main content area is titled 'Device Enrollment' and contains a sub-header: 'To enroll your Schlage Home Dimmer/Appliance Module, please complete the steps below:'. A five-step list provides detailed instructions for the enrollment process, including disconnecting power, holding the bridge near the device, pressing the plus button, double-clicking the include button, and observing the light status. A 'Continue' button is located at the bottom right of the instructions. On the right side, a 'Resources' section features a video player for 'Schlage Home Dimmer/Appliance Module Installation Video' and links to 'Schlage Home Dimmer Module User Guide' and 'Schlage Home Appliance Module User Guide'. Below the resources is a 'Helpful Tips' section with one tip regarding AC outlet proximity. A red callout box at the top right highlights a 'NEW – Resource Section' containing Videos, FAQs, and Documentation. A red callout box at the bottom left points to a 'Go back to enrollment cart to change enrollment list' button. A speech bubble at the bottom left contains the text: 'I don't have a Schlage Home Dimmer/Appliance Module to add to my home'.

NEW – Resource Section

- Videos
- FAQs
- Documentation

Device Enrollment

To enroll your Schlage Home Dimmer/Appliance Module, please complete the steps below:

1. Disconnect the Nexia Home Bridge from the Internet and AC power. Install a fresh 9V battery into your Nexia Home Bridge.
2. Hold the Nexia Home Bridge within six feet of your Dimmer or Appliance Module. Press and release the plus (+) button on your Nexia Home Bridge. You have 30 seconds to complete the next step.
3. Double-click the include button on your Schlage Home Dimmer or Appliance Module. ?
4. Observe the lights on your Nexia Home Bridge. The orange light will blink while enrollment is taking place. The enrollment process is complete when the orange light becomes solid.
5. Remove the 9V battery from your bridge. Reconnect your bridge to the Internet and AC power.

[Continue](#)

Resources

Schlage Home Dimmer/Appliance Module Installation Video

Schlage Home Dimmer and Appliance Module Installation Video

[Schlage Home Dimmer Module User Guide](#)

[Schlage Home Appliance Module User Guide](#)

Helpful Tips


- If there is an AC outlet within 6 feet of your Nexia Home Bridge, you can use it to enroll your Schlage Home Dimmer or Appliance Module without having to unplug the Nexia Home Bridge and use the 9V battery.

I don't have a Schlage Home Dimmer/Appliance Module to add to my home

Go back to enrollment cart to change enrollment list

Set Up Process: Dimmer Module - Enrollment

- Information box shows progress of enrolling the dimmer module into the bridge

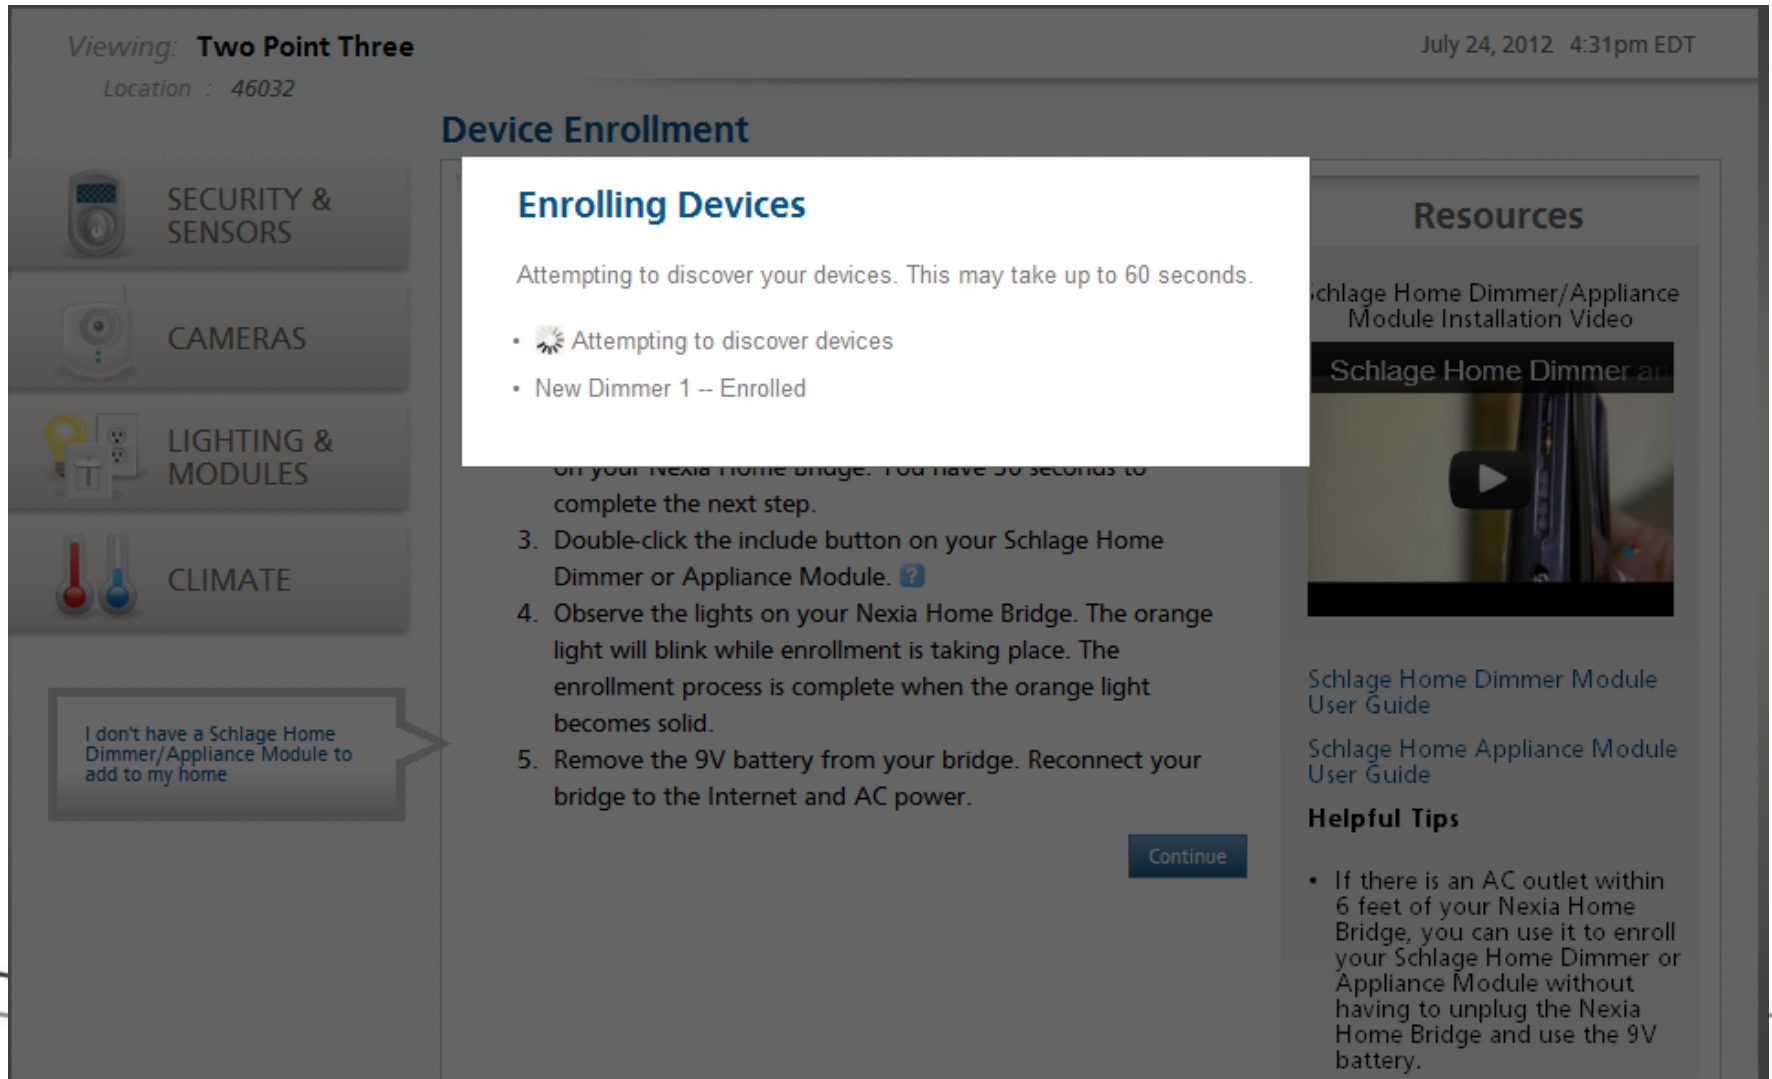

Viewing: **Two Point Three**
Location : 46032

July 24, 2012 4:31pm EDT

Device Enrollment

Enrolling Devices

Attempting to discover your devices. This may take up to 60 seconds.

- Attempting to discover devices
- New Dimmer 1 -- Enrolled

on your Nexia Home Bridge. You have 30 seconds to complete the next step.

- Double-click the include button on your Schlage Home Dimmer or Appliance Module. ?
- Observe the lights on your Nexia Home Bridge. The orange light will blink while enrollment is taking place. The enrollment process is complete when the orange light becomes solid.
- Remove the 9V battery from your bridge. Reconnect your bridge to the Internet and AC power.

[Continue](#)

Resources

Schlage Home Dimmer/Appliance Module Installation Video

Schlage Home Dimmer ap

Schlage Home Dimmer Module User Guide

Schlage Home Appliance Module User Guide

Helpful Tips

- If there is an AC outlet within 6 feet of your Nexia Home Bridge, you can use it to enroll your Schlage Home Dimmer or Appliance Module without having to unplug the Nexia Home Bridge and use the 9V battery.


I don't have a Schlage Home Dimmer/Appliance Module to add to my home

Set Up Process: Dimmer Module - Confirmation

- “Congratulations” screen gives confirmation the dimmer module has been successfully added to the account
- Follow the onscreen instructions.
- Enter descriptive name of dimmer module (Example: Living Room Lamp)

NEW – Helpful Tips

Helpful information about the enrolled device

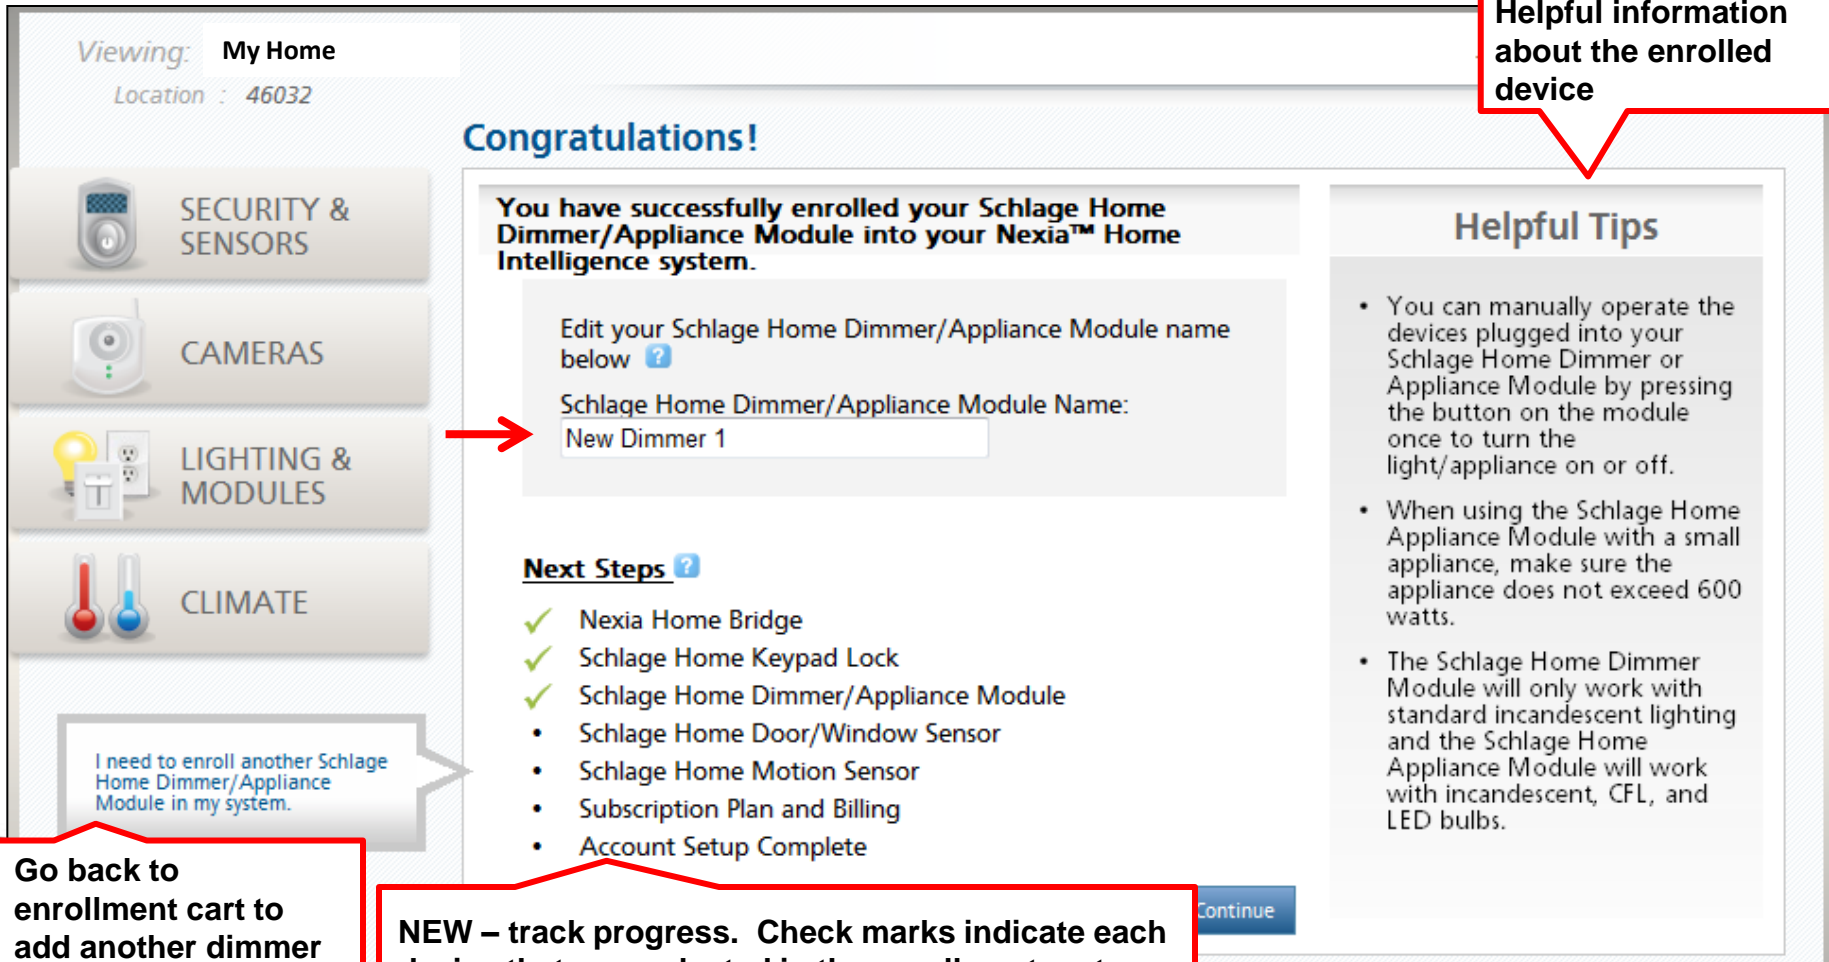

The screenshot shows the 'Congratulations!' screen in the Nexia Home Intelligence app. On the left is a navigation menu with categories: SECURITY & SENSORS, CAMERAS, LIGHTING & MODULES (highlighted with a red arrow), and CLIMATE. The main content area displays a confirmation message: 'You have successfully enrolled your Schlage Home Dimmer/Appliance Module into your Nexia™ Home Intelligence system.' Below this, there is a text input field for the device name, currently containing 'New Dimmer 1'. A 'Next Steps' section lists items with checkmarks: Nexia Home Bridge, Schlage Home Keypad Lock, Schlage Home Dimmer/Appliance Module, Schlage Home Door/Window Sensor, Schlage Home Motion Sensor, Subscription Plan and Billing, and Account Setup Complete. A 'Helpful Tips' section on the right provides instructions on manual operation and power limits. A 'Continue' button is at the bottom right. A callout box at the bottom left says 'Go back to enrollment cart to add another dimmer', and another at the bottom center says 'NEW – track progress. Check marks indicate each device that was selected in the enrollment cart'. A top callout box says 'NEW – Helpful Tips Helpful information about the enrolled device'. A bottom callout box says 'I need to enroll another Schlage Home Dimmer/Appliance Module in my system.'

Go back to enrollment cart to add another dimmer


NEW – track progress. Check marks indicate each device that was selected in the enrollment cart

Set Up Process: Door/Window Sensor – Getting Started & Instructions

- In this example, the next step is to enroll the door/window sensor
- Follow the onscreen instructions to confirm items required
- *Note:* The door / window sensor is one sensor that works in either application on doors or windows.

NEW – Resource Section

- Videos
- FAQs
- Documentation

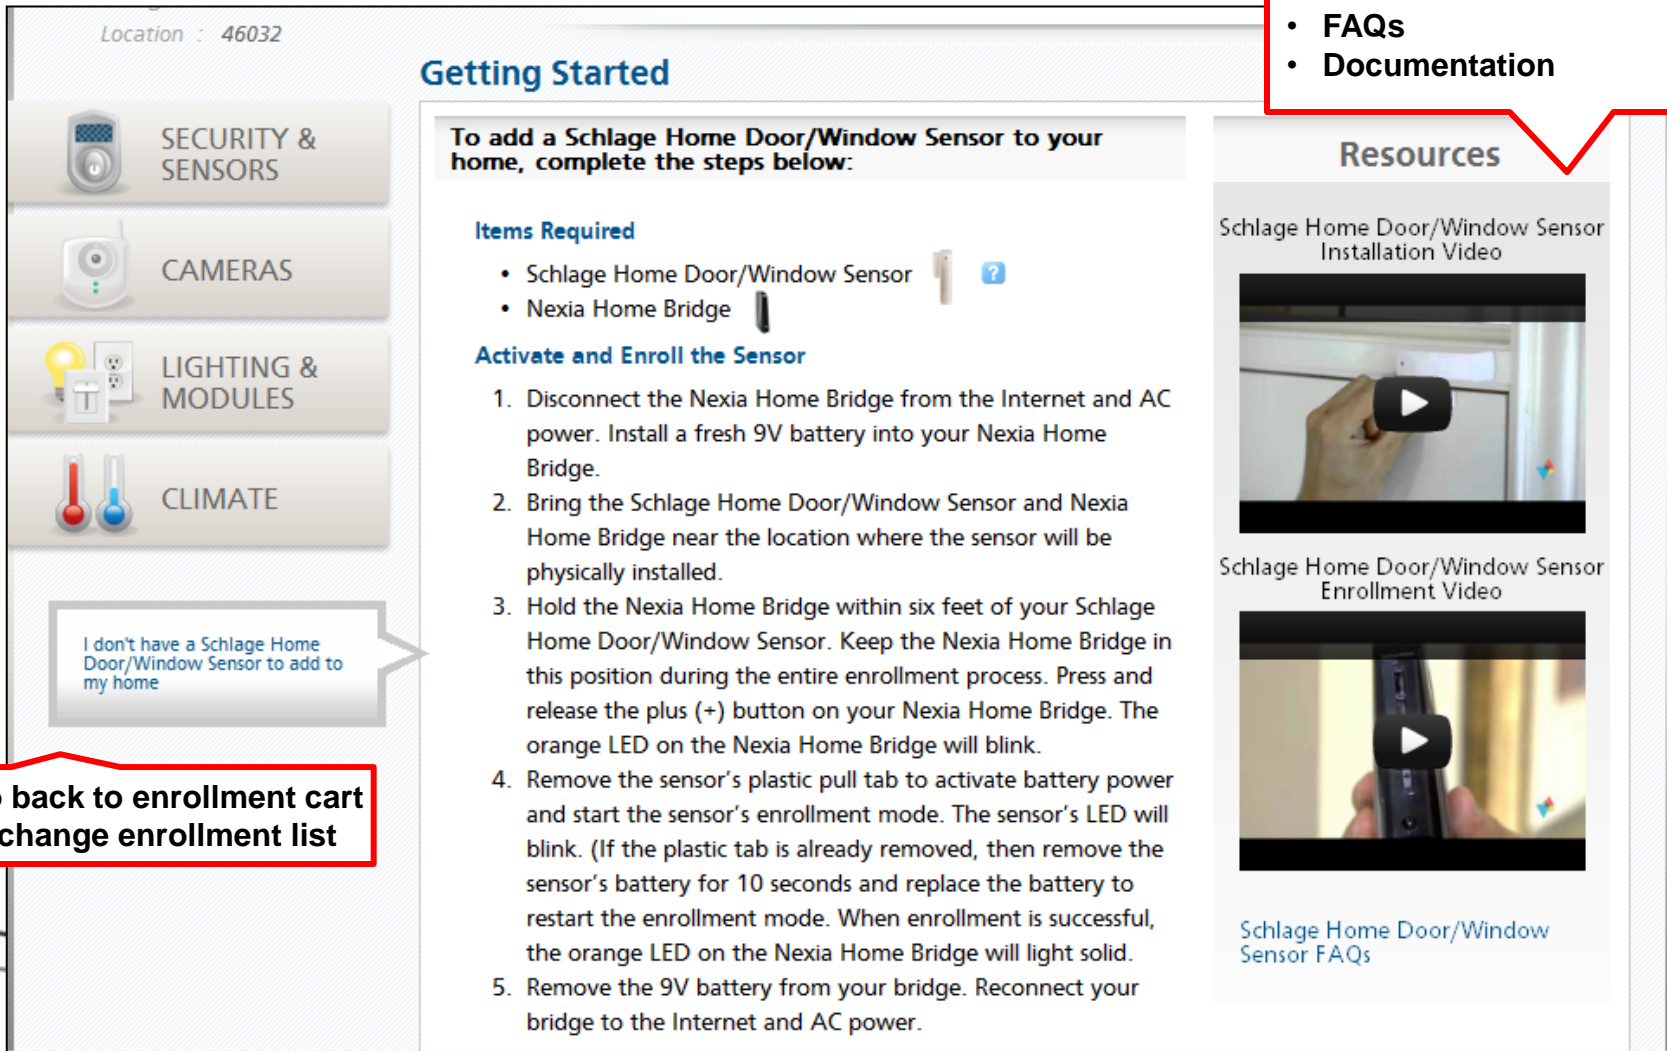

The screenshot shows the app interface with a sidebar on the left containing categories: SECURITY & SENSORS, CAMERAS, LIGHTING & MODULES, and CLIMATE. The main content area is titled 'Getting Started' and includes a 'Resources' section. A red callout box points to the 'Resources' section, and another red callout box points to the 'Go back to enrollment cart to change enrollment list' button.

Location : 46032

Getting Started

To add a Schlage Home Door/Window Sensor to your home, complete the steps below:

Items Required

- Schlage Home Door/Window Sensor
- Nexia Home Bridge

Activate and Enroll the Sensor

1. Disconnect the Nexia Home Bridge from the Internet and AC power. Install a fresh 9V battery into your Nexia Home Bridge.
2. Bring the Schlage Home Door/Window Sensor and Nexia Home Bridge near the location where the sensor will be physically installed.
3. Hold the Nexia Home Bridge within six feet of your Schlage Home Door/Window Sensor. Keep the Nexia Home Bridge in this position during the entire enrollment process. Press and release the plus (+) button on your Nexia Home Bridge. The orange LED on the Nexia Home Bridge will blink.
4. Remove the sensor's plastic pull tab to activate battery power and start the sensor's enrollment mode. The sensor's LED will blink. (If the plastic tab is already removed, then remove the sensor's battery for 10 seconds and replace the battery to restart the enrollment mode. When enrollment is successful, the orange LED on the Nexia Home Bridge will light solid.
5. Remove the 9V battery from your bridge. Reconnect your bridge to the Internet and AC power.

Resources

Schlage Home Door/Window Sensor Installation Video

Schlage Home Door/Window Sensor Enrollment Video


Schlage Home Door/Window Sensor FAQs

I don't have a Schlage Home Door/Window Sensor to add to my home

Go back to enrollment cart to change enrollment list

Set Up Process: Door/Window Sensor - Enrollment

- Information box shows progress of enrolling the door/window sensor into the bridge

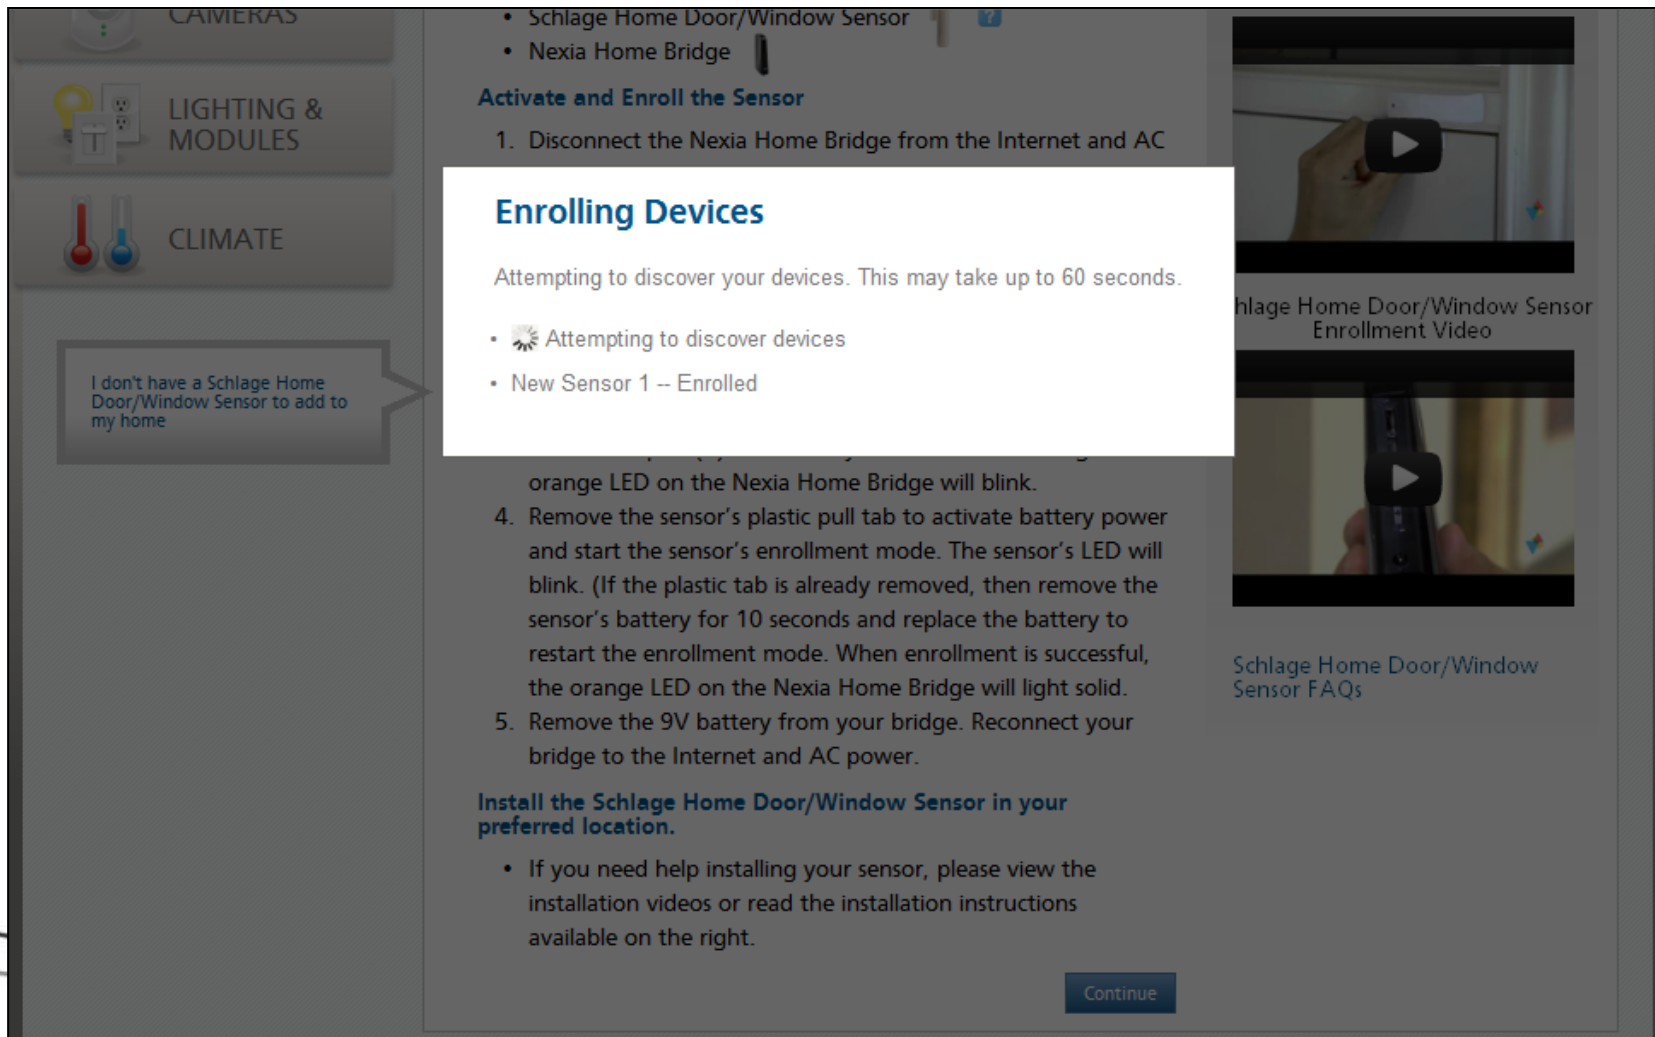

Enrolling Devices

Attempting to discover your devices. This may take up to 60 seconds.

- Attempting to discover devices
- New Sensor 1 -- Enrolled

Activate and Enroll the Sensor

1. Disconnect the Nexia Home Bridge from the Internet and AC
2. Remove the sensor's battery cover. The orange LED on the Nexia Home Bridge will blink.
3. Remove the sensor's battery cover. The orange LED on the Nexia Home Bridge will blink. (If the plastic tab is already removed, then remove the sensor's battery for 10 seconds and replace the battery to restart the enrollment mode. When enrollment is successful, the orange LED on the Nexia Home Bridge will light solid.)
4. Remove the sensor's plastic pull tab to activate battery power and start the sensor's enrollment mode. The sensor's LED will blink. (If the plastic tab is already removed, then remove the sensor's battery for 10 seconds and replace the battery to restart the enrollment mode. When enrollment is successful, the orange LED on the Nexia Home Bridge will light solid.)
5. Remove the 9V battery from your bridge. Reconnect your bridge to the Internet and AC power.

Install the Schlage Home Door/Window Sensor in your preferred location.

- If you need help installing your sensor, please view the installation videos or read the installation instructions available on the right.


[Schlage Home Door/Window Sensor Enrollment Video](#)

[Schlage Home Door/Window Sensor FAQs](#)

Continue

Set Up Process: Door/Window Sensor - Confirmation

- “Congratulations” screen gives confirmation the door/window sensor has been successfully added to the account
- Follow the onscreen instructions.
- Enter descriptive name of door/window sensor (Example: Back Door)

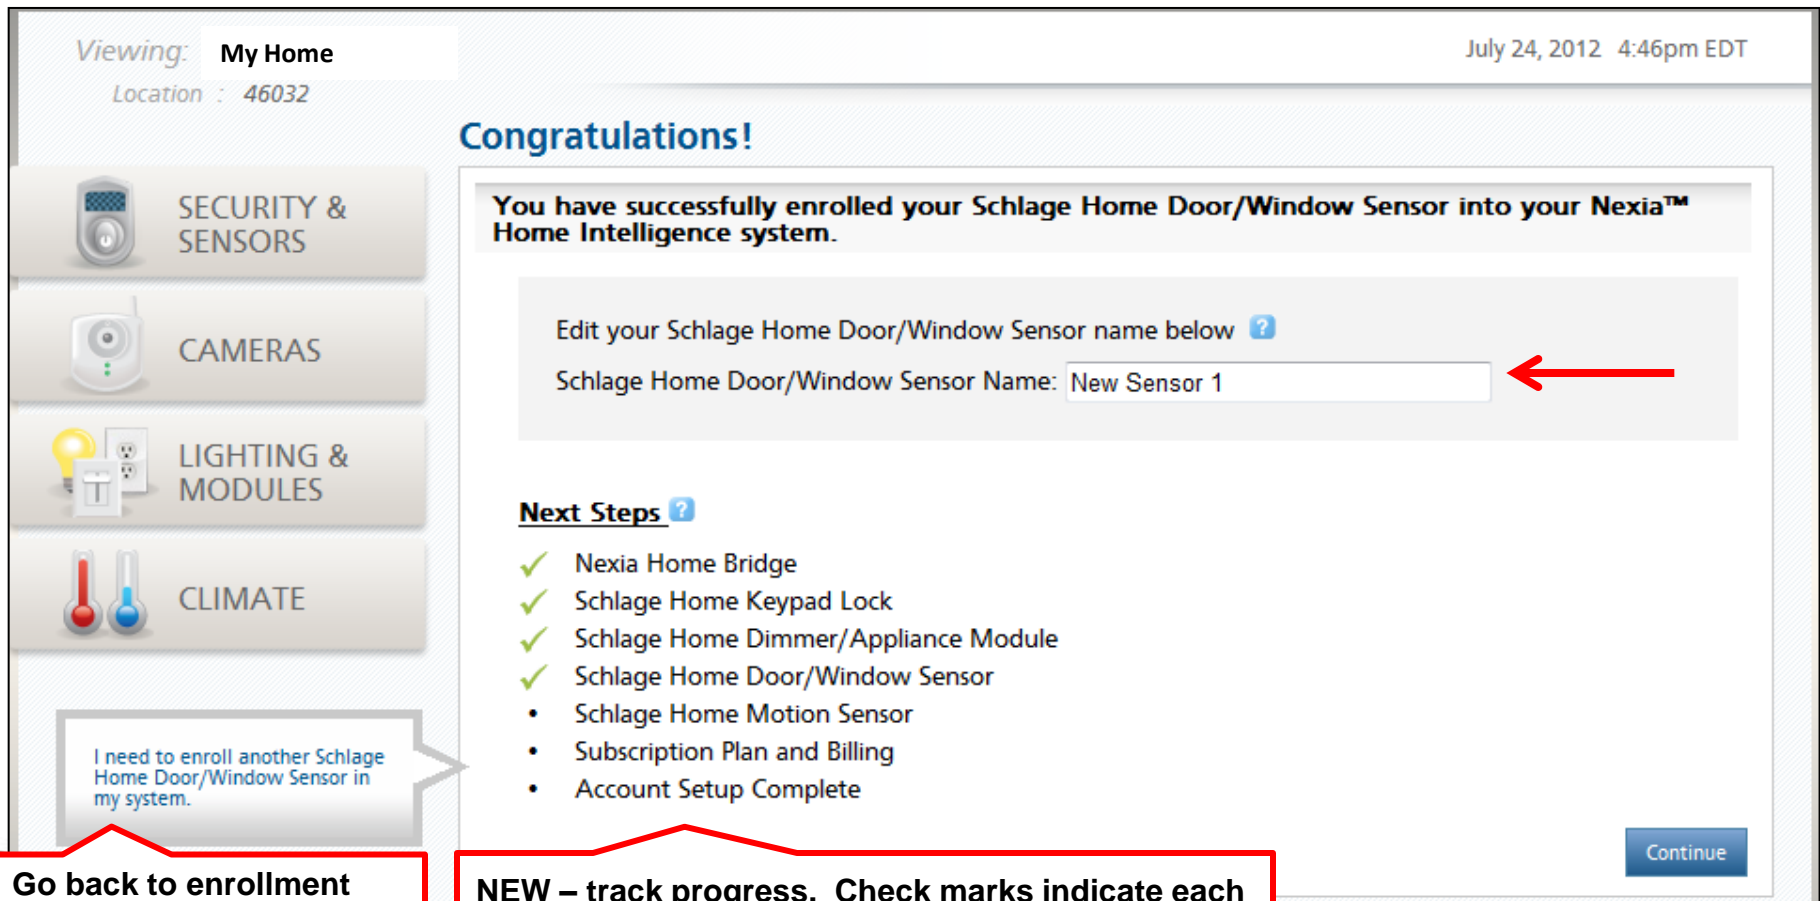

Viewing: My Home
Location : 46032
July 24, 2012 4:46pm EDT

Congratulations!

You have successfully enrolled your Schlage Home Door/Window Sensor into your Nexia™ Home Intelligence system.

Edit your Schlage Home Door/Window Sensor name below ?

Schlage Home Door/Window Sensor Name:

Next Steps ?

- ✓ Nexia Home Bridge
- ✓ Schlage Home Keypad Lock
- ✓ Schlage Home Dimmer/Appliance Module
- ✓ Schlage Home Door/Window Sensor
 - Schlage Home Motion Sensor
 - Subscription Plan and Billing
 - Account Setup Complete

I need to enroll another Schlage Home Door/Window Sensor in my system.


Continue

Go back to enrollment cart to add another door/window sensor

NEW – track progress. Check marks indicate each device that was selected in the enrollment cart

Set Up Process: Motion Sensor – Getting Started & Instructions

- In this example, the next step is to enroll the motion sensor
- Follow the onscreen instructions to confirm items required

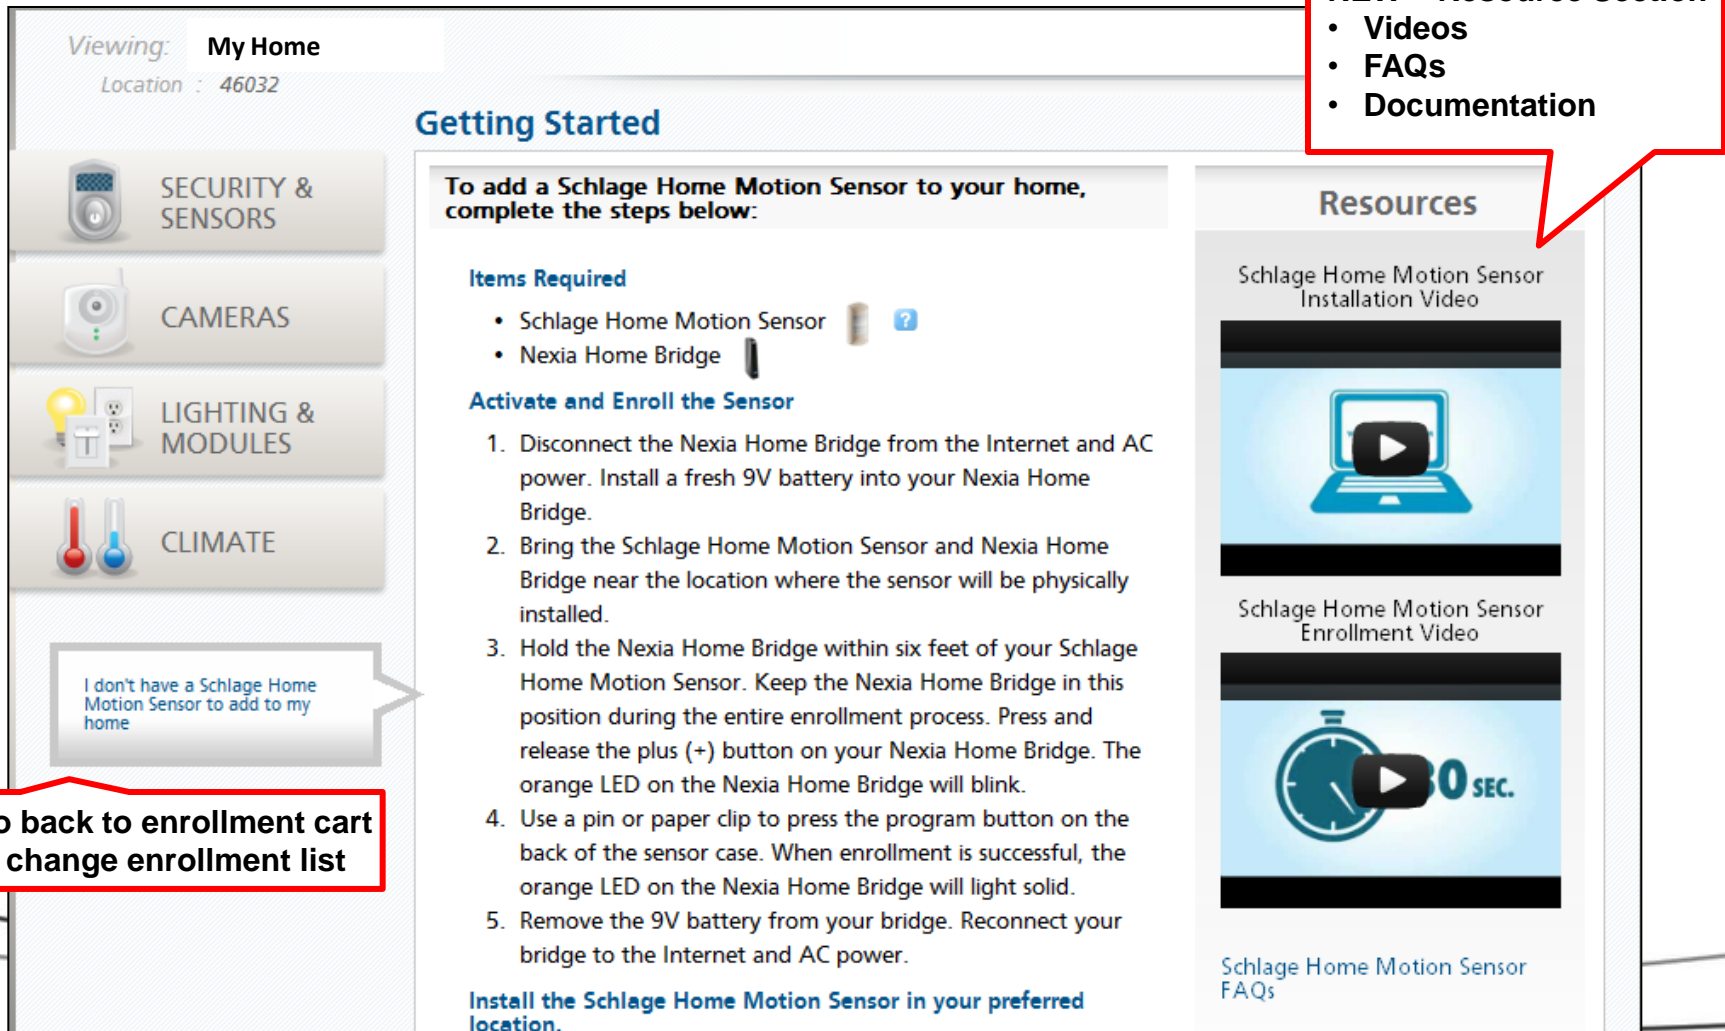

NEW – Resource Section




- Videos
- FAQs
- Documentation

Viewing: **My Home**
Location : 46032

Getting Started

To add a Schlage Home Motion Sensor to your home, complete the steps below:

Items Required



- Schlage Home Motion Sensor  
- Nexia Home Bridge 

Activate and Enroll the Sensor

1. Disconnect the Nexia Home Bridge from the Internet and AC power. Install a fresh 9V battery into your Nexia Home Bridge.
2. Bring the Schlage Home Motion Sensor and Nexia Home Bridge near the location where the sensor will be physically installed.
3. Hold the Nexia Home Bridge within six feet of your Schlage Home Motion Sensor. Keep the Nexia Home Bridge in this position during the entire enrollment process. Press and release the plus (+) button on your Nexia Home Bridge. The orange LED on the Nexia Home Bridge will blink.
4. Use a pin or paper clip to press the program button on the back of the sensor case. When enrollment is successful, the orange LED on the Nexia Home Bridge will light solid.
5. Remove the 9V battery from your bridge. Reconnect your bridge to the Internet and AC power.

Install the Schlage Home Motion Sensor in your preferred location.

Resources


- Schlage Home Motion Sensor Installation Video 
- Schlage Home Motion Sensor Enrollment Video 
- Schlage Home Motion Sensor FAQs

I don't have a Schlage Home Motion Sensor to add to my home

Go back to enrollment cart to change enrollment list

Set Up Process: Motion Sensor - Enrollment

- Information box shows progress of enrolling the motion sensor into the bridge

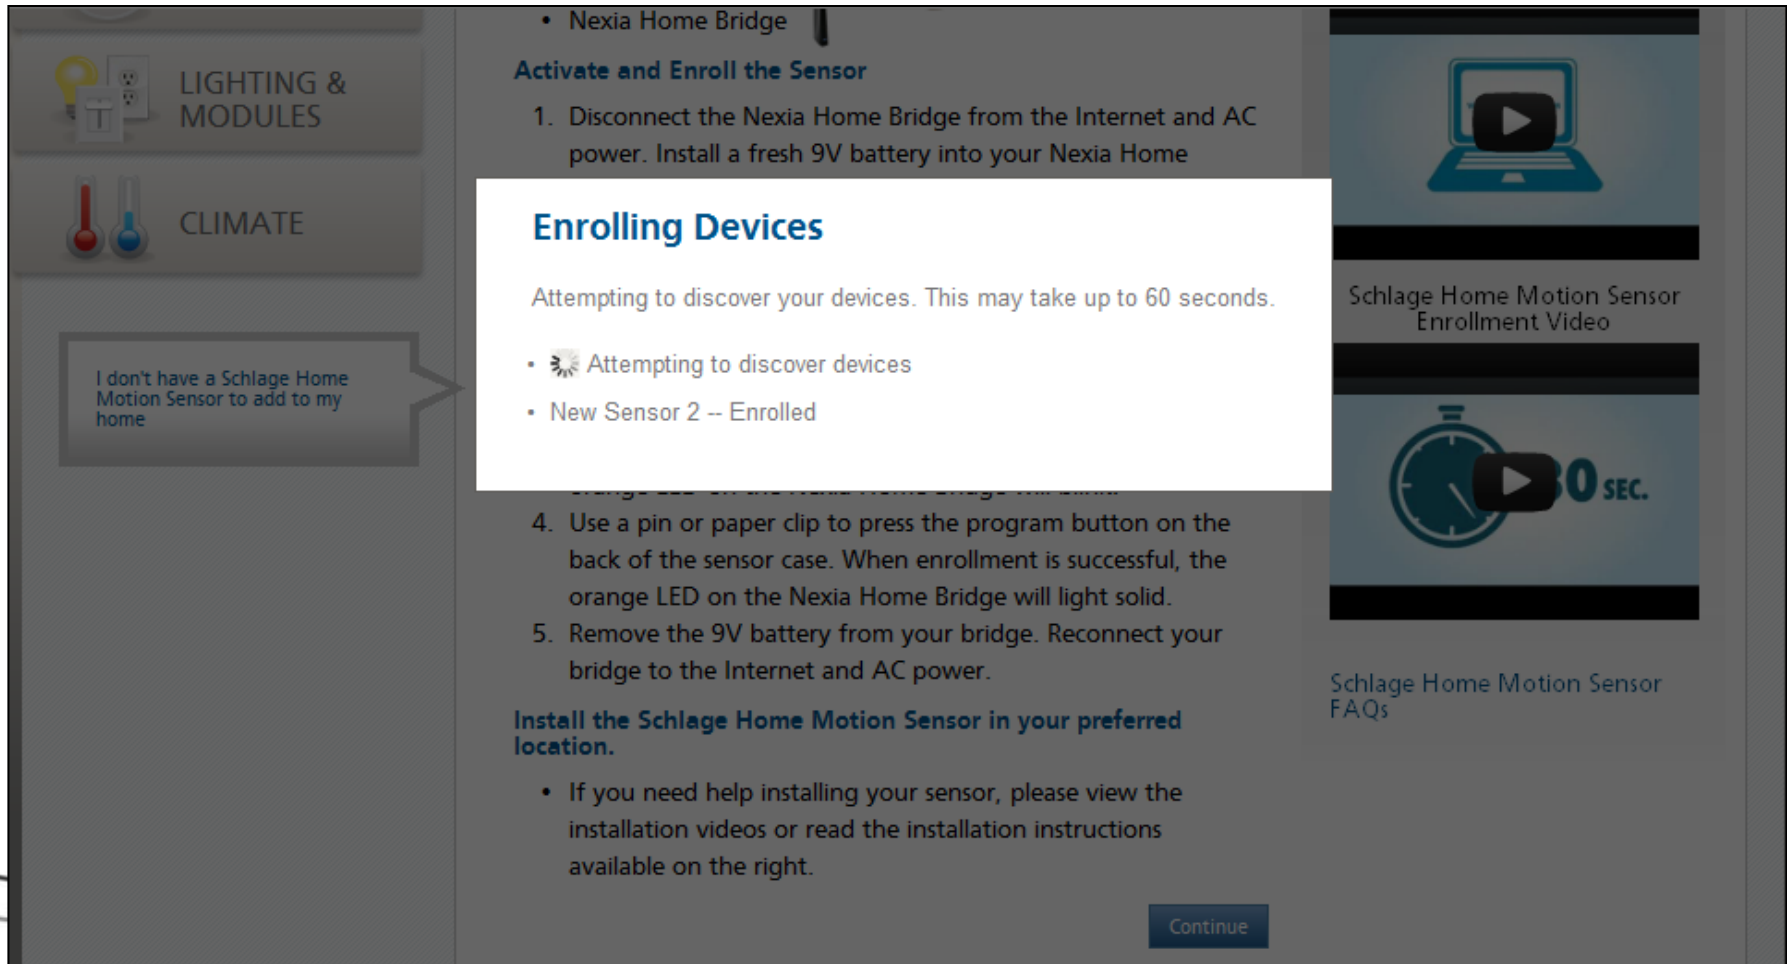

The screenshot shows the 'Activate and Enroll the Sensor' section of the Nexia Home Bridge interface. A central white modal window titled 'Enrolling Devices' displays the progress: 'Attempting to discover your devices. This may take up to 60 seconds.' Below this, a list shows 'Attempting to discover devices' with a loading icon and 'New Sensor 2 -- Enrolled'. The background interface includes a sidebar with 'LIGHTING & MODULES' and 'CLIMATE' options, a 'Continue' button at the bottom, and a right-hand panel with video and FAQ links. A callout box on the left states: 'I don't have a Schlage Home Motion Sensor to add to my home'.


• Nexia Home Bridge

Activate and Enroll the Sensor

1. Disconnect the Nexia Home Bridge from the Internet and AC power. Install a fresh 9V battery into your Nexia Home

Enrolling Devices

Attempting to discover your devices. This may take up to 60 seconds.

-  Attempting to discover devices
- New Sensor 2 -- Enrolled

4. Use a pin or paper clip to press the program button on the back of the sensor case. When enrollment is successful, the orange LED on the Nexia Home Bridge will light solid.
5. Remove the 9V battery from your bridge. Reconnect your bridge to the Internet and AC power.

Install the Schlage Home Motion Sensor in your preferred location.

- If you need help installing your sensor, please view the installation videos or read the installation instructions available on the right.

Continue

Schlage Home Motion Sensor Enrollment Video


Schlage Home Motion Sensor 30 SEC.

Schlage Home Motion Sensor FAQs

I don't have a Schlage Home Motion Sensor to add to my home

Set Up Process: Motion Sensor - Confirmation

- “Congratulations” screen gives confirmation the motion sensor has been successfully added to the account
- Follow the onscreen instructions.
- Enter descriptive name of motion sensor (Example: Living Room Motion Sensor)

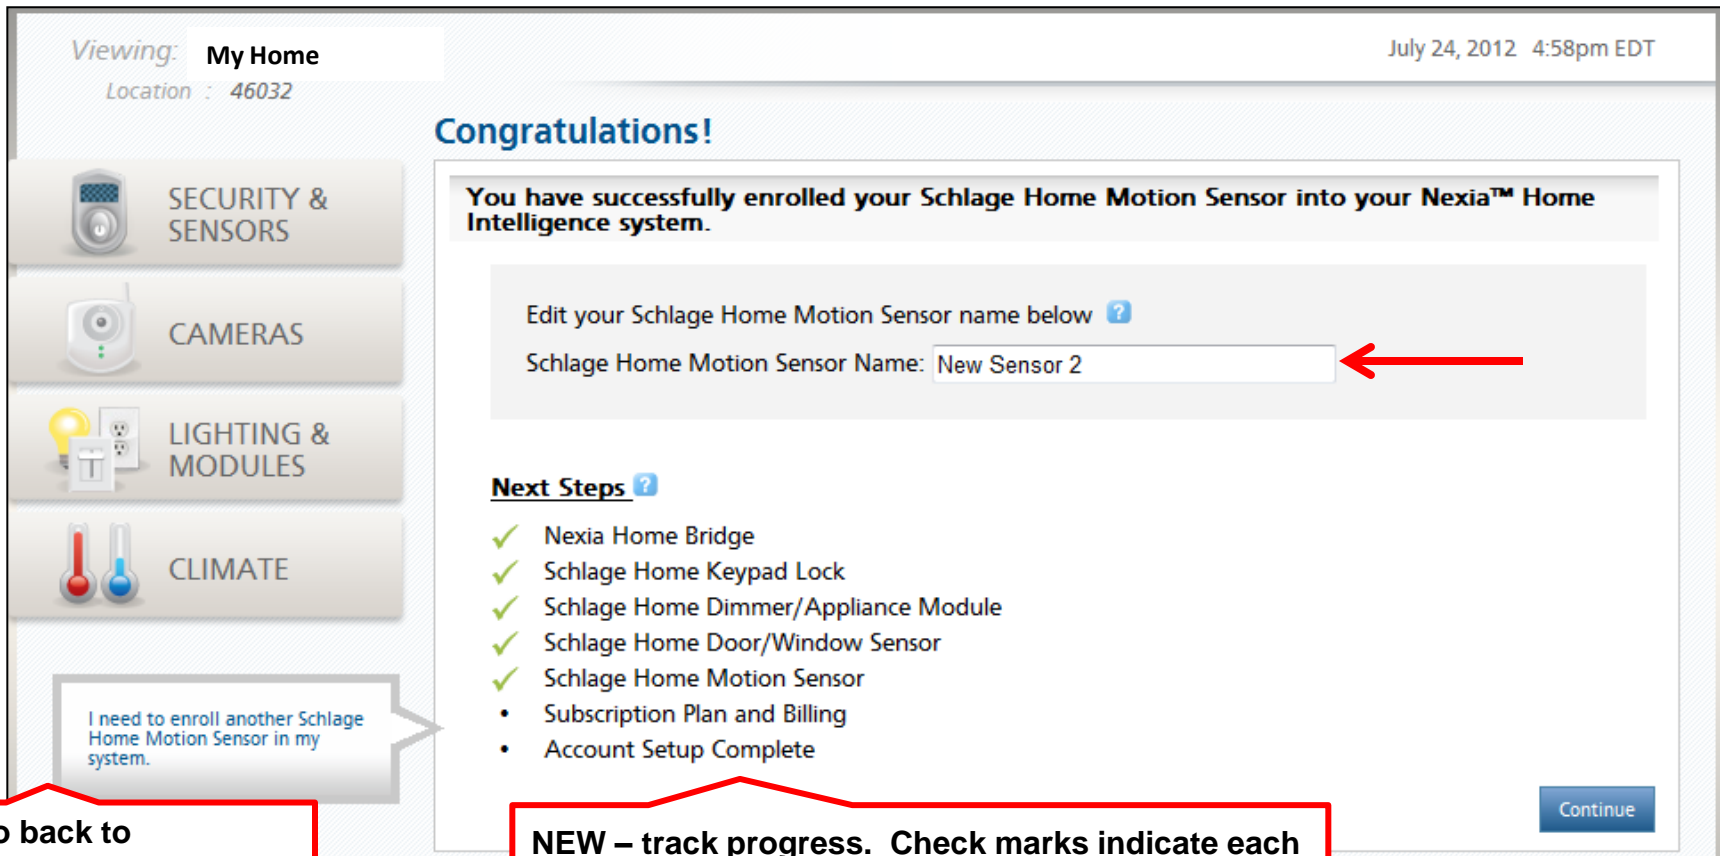

Viewing: **My Home**
Location : 46032

July 24, 2012 4:58pm EDT

Congratulations!

You have successfully enrolled your Schlage Home Motion Sensor into your Nexia™ Home Intelligence system.

Edit your Schlage Home Motion Sensor name below ?

Schlage Home Motion Sensor Name:

Next Steps ?

- ✓ Nexia Home Bridge
- ✓ Schlage Home Keypad Lock
- ✓ Schlage Home Dimmer/Appliance Module
- ✓ Schlage Home Door/Window Sensor
- ✓ Schlage Home Motion Sensor
- Subscription Plan and Billing
- Account Setup Complete

I need to enroll another Schlage Home Motion Sensor in my system.

 
Continue

Go back to enrollment cart to add motion sensor

NEW – track progress. Check marks indicate each device that was selected in the enrollment cart


Set Up Process: Promotion Code

- If applicable, Enter a 16 digit promotion code
 - Type it in the box and click on the “Apply” button
 - A message will be presented on screen to indicate code validation
- If promotion code is not applicable, click the “I don’t have a promo code” button to continue

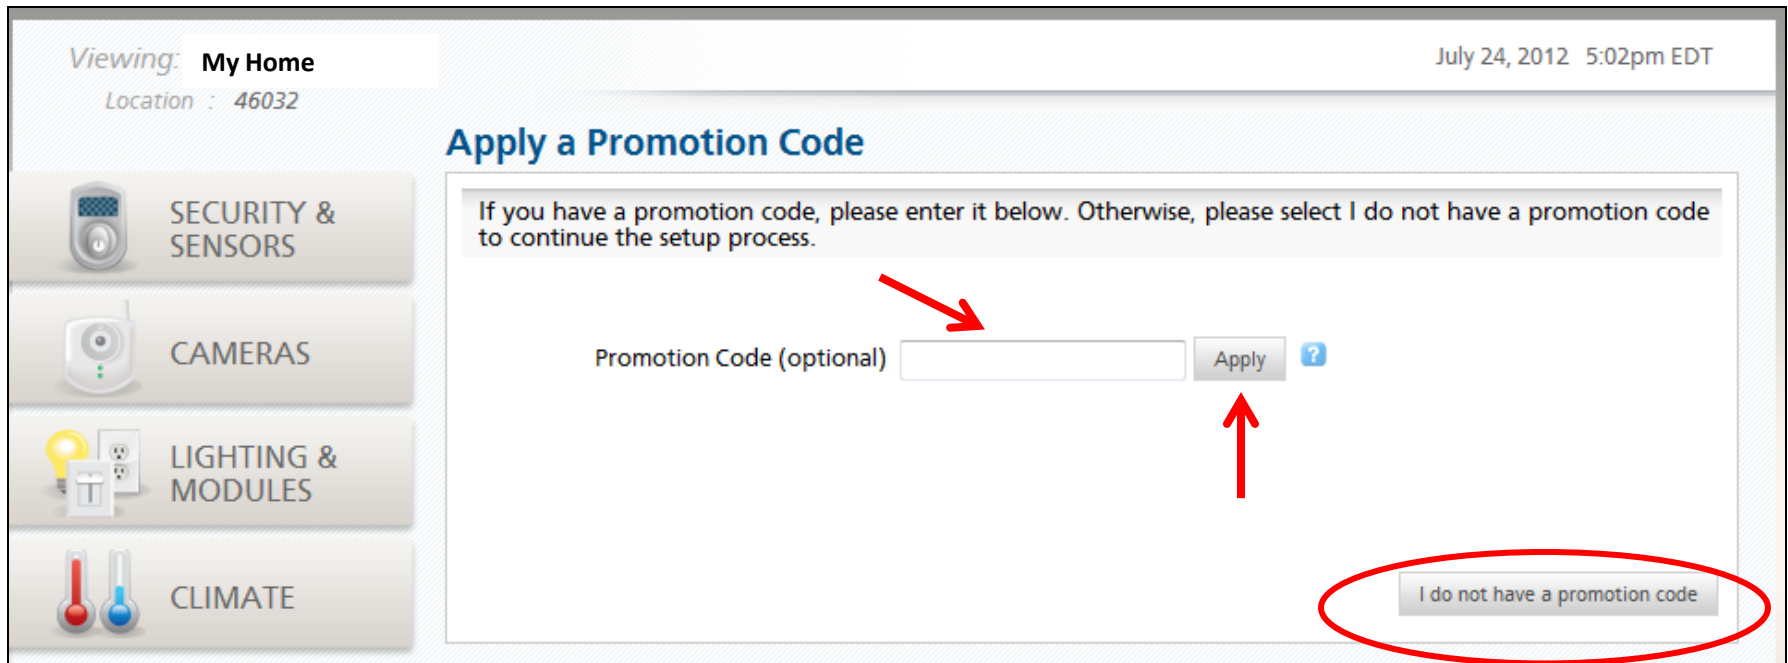

Set Up Process: Subscription Selection

- Select subscription plan and follow the on screen instructions.
- Note the bill date at the bottom of the screen. The credit card will not be charged until that date.
- Add optional plans for increased video storage

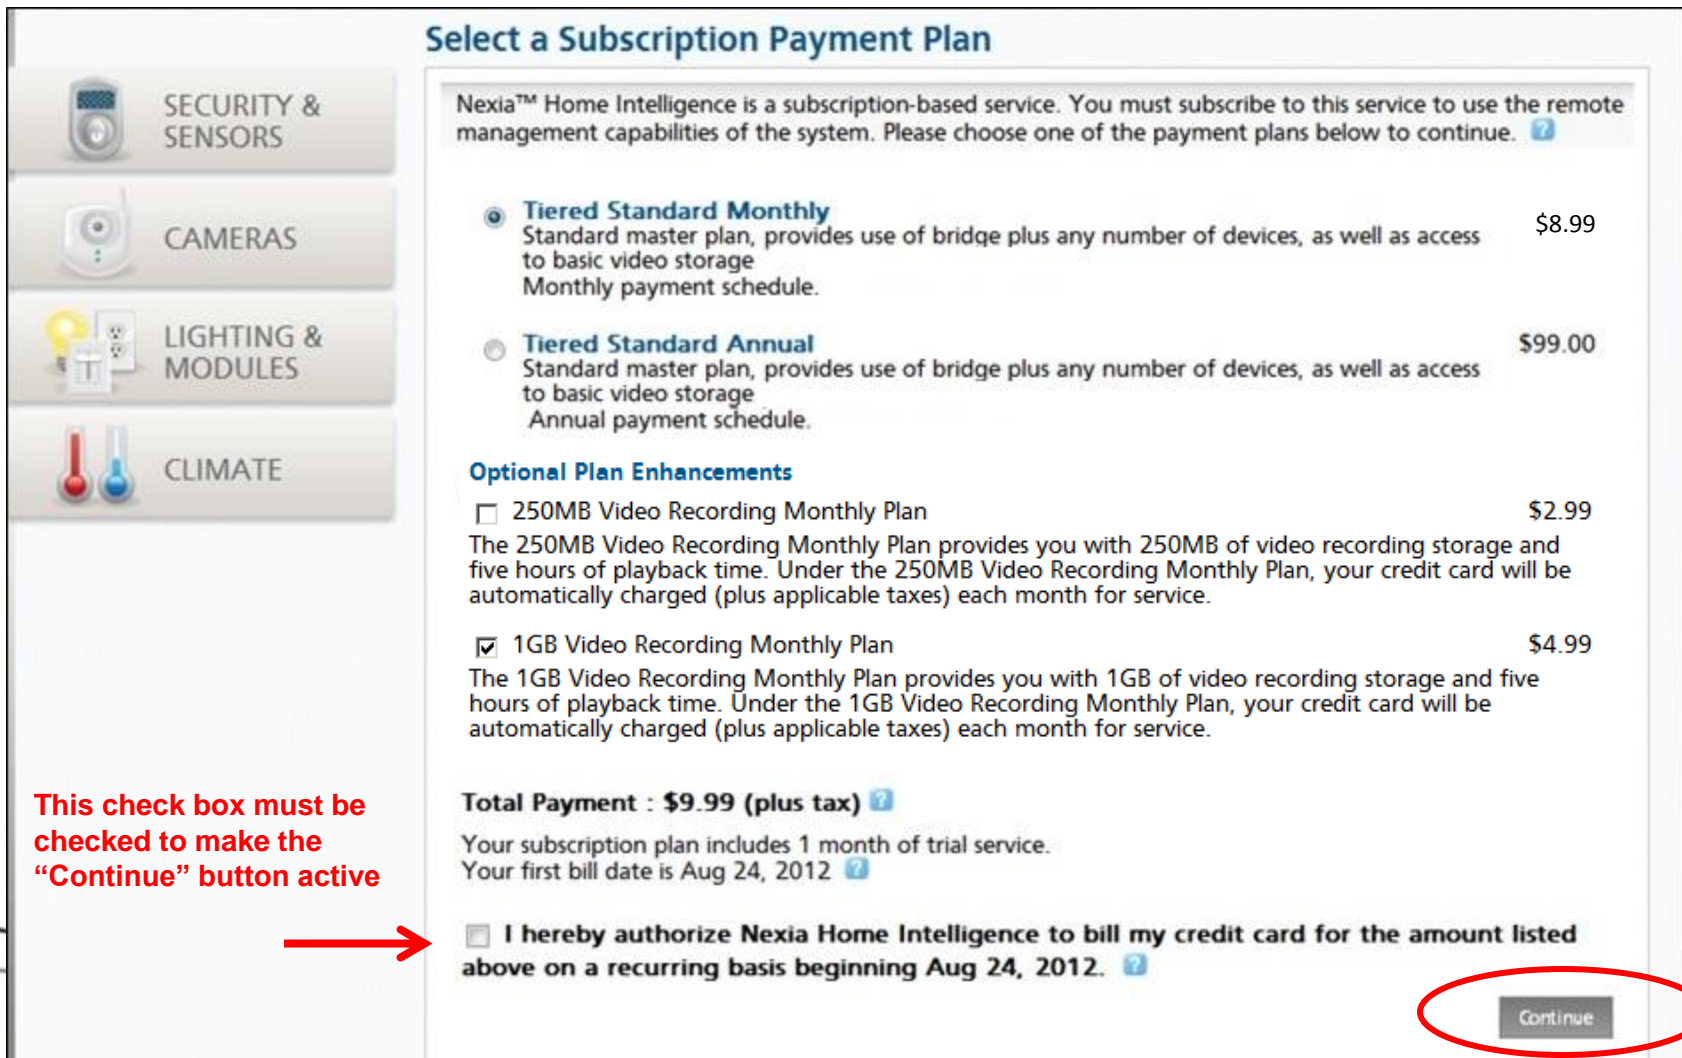

Select a Subscription Payment Plan

Nexia™ Home Intelligence is a subscription-based service. You must subscribe to this service to use the remote management capabilities of the system. Please choose one of the payment plans below to continue. ?

- Tiered Standard Monthly**
Standard master plan, provides use of bridge plus any number of devices, as well as access to basic video storage
Monthly payment schedule. **\$8.99**
- Tiered Standard Annual**
Standard master plan, provides use of bridge plus any number of devices, as well as access to basic video storage
Annual payment schedule. **\$99.00**

Optional Plan Enhancements

- 250MB Video Recording Monthly Plan** **\$2.99**
The 250MB Video Recording Monthly Plan provides you with 250MB of video recording storage and five hours of playback time. Under the 250MB Video Recording Monthly Plan, your credit card will be automatically charged (plus applicable taxes) each month for service.
- 1GB Video Recording Monthly Plan** **\$4.99**
The 1GB Video Recording Monthly Plan provides you with 1GB of video recording storage and five hours of playback time. Under the 1GB Video Recording Monthly Plan, your credit card will be automatically charged (plus applicable taxes) each month for service.

 
Total Payment : \$9.99 (plus tax) ?

Your subscription plan includes 1 month of trial service.
Your first bill date is Aug 24, 2012 ?

I hereby authorize Nexia Home Intelligence to bill my credit card for the amount listed above on a recurring basis beginning Aug 24, 2012. ?

Continue


This check box must be checked to make the "Continue" button active





Set Up Process: Credit Card - Billing Address


- Enter credit card billing address or check box if billing address is the same as mailing address that was entered at the beginning of the set up process

Viewing: **My Home** July 24, 2012 5:26pm EDT
Location : 46032

 SECURITY & SENSORS

 CAMERAS

 LIGHTING & MODULES

 CLIMATE

Credit Card Information

Please provide your credit card information below.

Credit Card Billing Address

* Required fields.

My Billing Address is the same as my Mailing Address.

Name (as it appears on card) *

Country * ▼

Address *

Address 2

City *

State * ▼

Zip Code *

Set Up Process: Credit Card – Account Number

- Enter credit card account number, expiration date, and CCV number

Viewing: **My Home**
Location : 46032

July 24, 2012 5:42pm EDT

Credit Card Information

Please provide your credit card information below.


Please enter your credit card information below.

Credit Card Info
* Required fields.


Credit Card Number * ?

Expiration Date * /

CCV * ?




Visa, Mastercard, Discover



3 Digit CCV Number


American Express



4 Digit CCV Number

Set Up Process: Confirmation and Completion

- After credit card validation, an information box confirms account activation and completion of set up process.
- Click “OK” to proceed to the dashboard

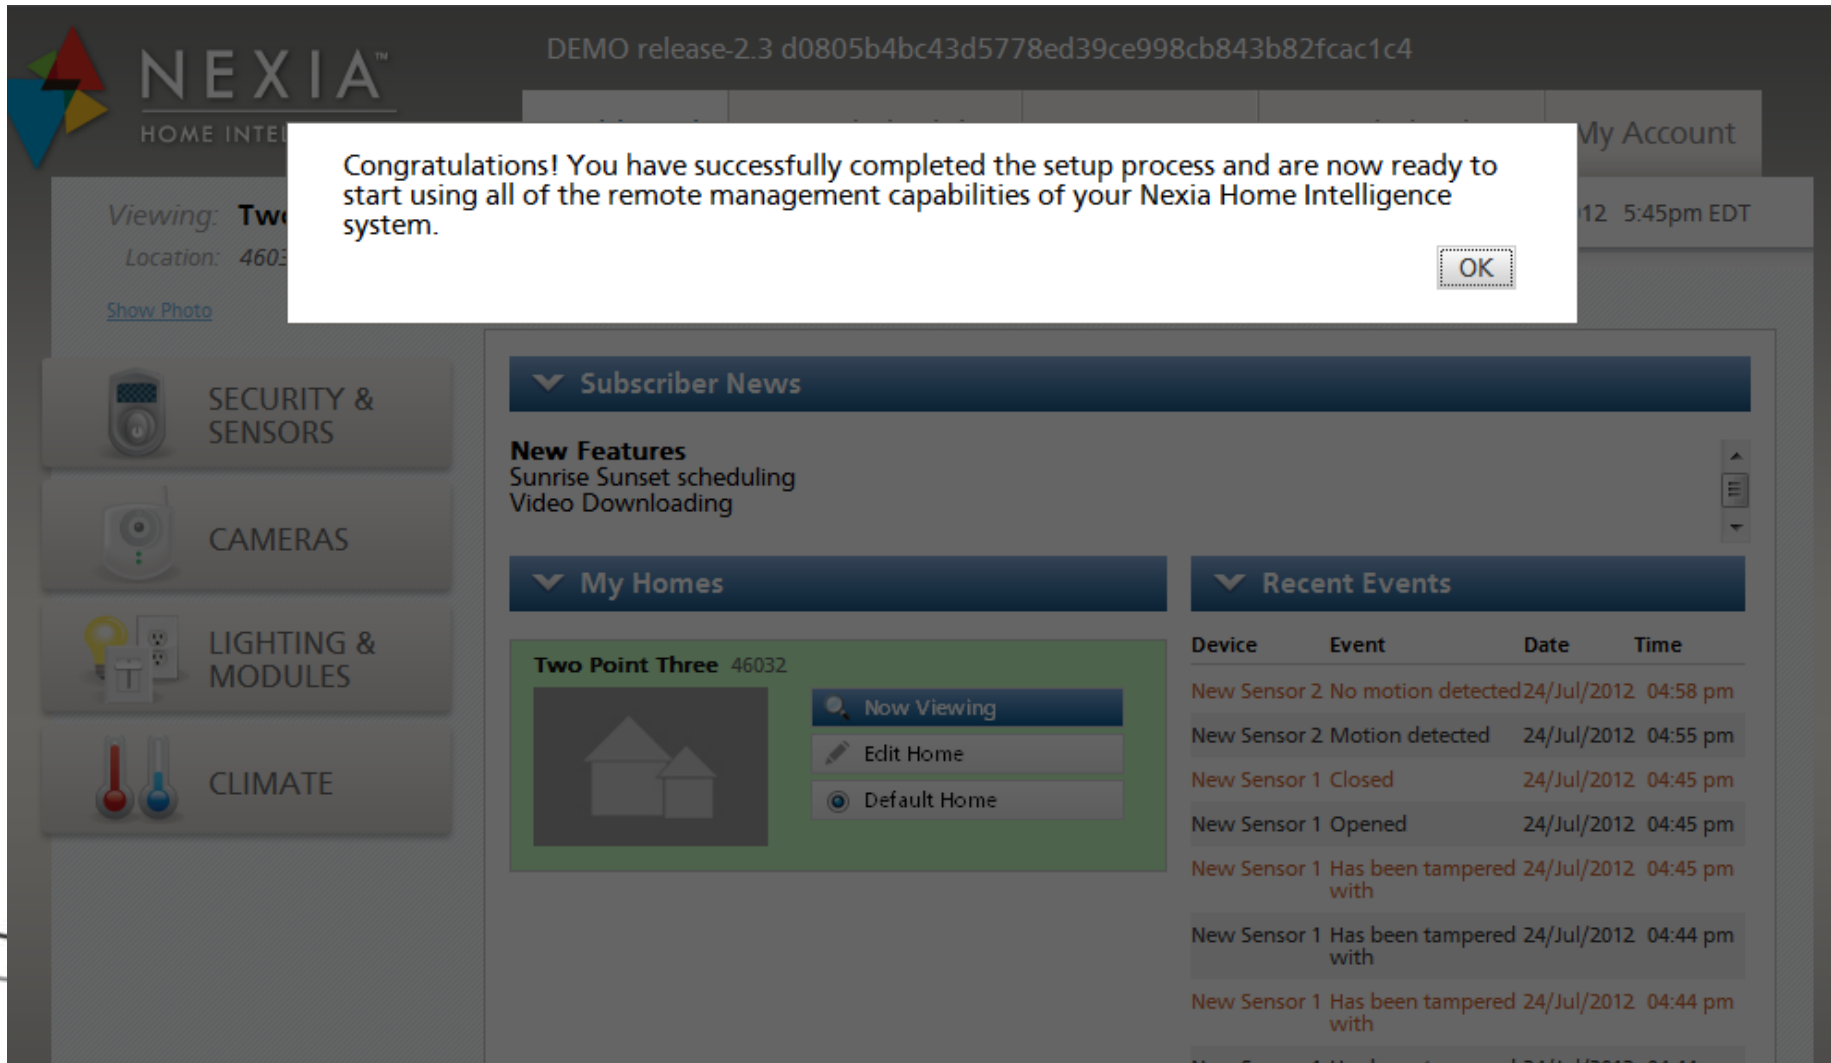

DEMO release-2.3 d0805b4bc43d5778ed39ce998cb843b82fcac1c4

CONGRATULATIONS! You have successfully completed the setup process and are now ready to start using all of the remote management capabilities of your Nexia Home Intelligence system.

OK

Subscriber News

New Features
Sunrise Sunset scheduling
Video Downloading

My Homes

Two Point Three 46032

- Now Viewing
- Edit Home
- Default Home

Recent Events

Device	Event	Date	Time
New Sensor 2	No motion detected	24/Jul/2012	04:58 pm
New Sensor 2	Motion detected	24/Jul/2012	04:55 pm
New Sensor 1	Closed	24/Jul/2012	04:45 pm
New Sensor 1	Opened	24/Jul/2012	04:45 pm
New Sensor 1	Has been tampered with	24/Jul/2012	04:45 pm
New Sensor 1	Has been tampered with	24/Jul/2012	04:44 pm
New Sensor 1	Has been tampered with	24/Jul/2012	04:44 pm
New Sensor 1	Has been tampered with	24/Jul/2012	04:44 pm

Viewing: Two Point Three
Location: 46032
Show Photo

SECURITY & SENSORS
CAMERAS
LIGHTING & MODULES
CLIMATE

My Account
12 5:45pm EDT

Nexia™ Home Intelligence Dashboard



- The “dashboard” view is the homepage after logging into Nexia Home Intelligence.
- Use the tabs on the left to control all enrolled devices.
- Use the tabs along the top to manage and customize your account.

The screenshot shows the Nexia Home Intelligence dashboard. At the top, it says "Welcome Presentation | Logout" and "View Home: Two Point Three (Edit Home)". The main navigation tabs are "Dashboard", "Scenes/Schedules", "Event History", "Recorded Videos", and "My Account". The current view is "My Home" at location "46032" on "July 24, 2012 5:49pm EDT".

On the left, there are five main control categories: SECURITY & SENSORS, CAMERAS, LIGHTING & MODULES, and CLIMATE. The "My Homes" section shows "Two Point Three 46032" with options to "Now Viewing", "Edit Home", and "Default Home".

The "Recent Events" table lists the following events:

Device	Event	Date	Time
New Sensor 2	No motion detected	24/Jul/2012	04:58 pm
New Sensor 2	Motion detected	24/Jul/2012	04:55 pm
New Sensor 1	Closed	24/Jul/2012	04:45 pm
New Sensor 1	Opened	24/Jul/2012	04:45 pm
New Sensor 1	Has been tampered with	24/Jul/2012	04:45 pm
New Sensor 1	Has been tampered with	24/Jul/2012	04:44 pm
New Sensor 1	Has been tampered with	24/Jul/2012	04:44 pm
New Sensor 1	Has been tampered with	24/Jul/2012	04:44 pm