

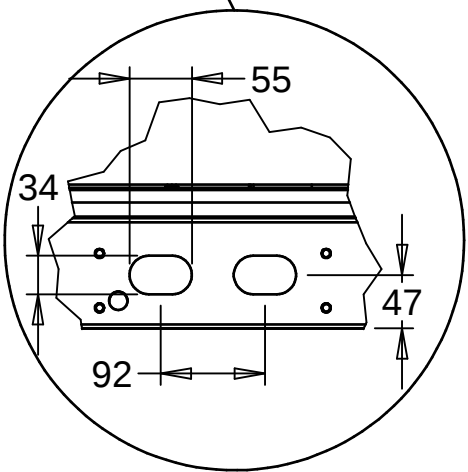
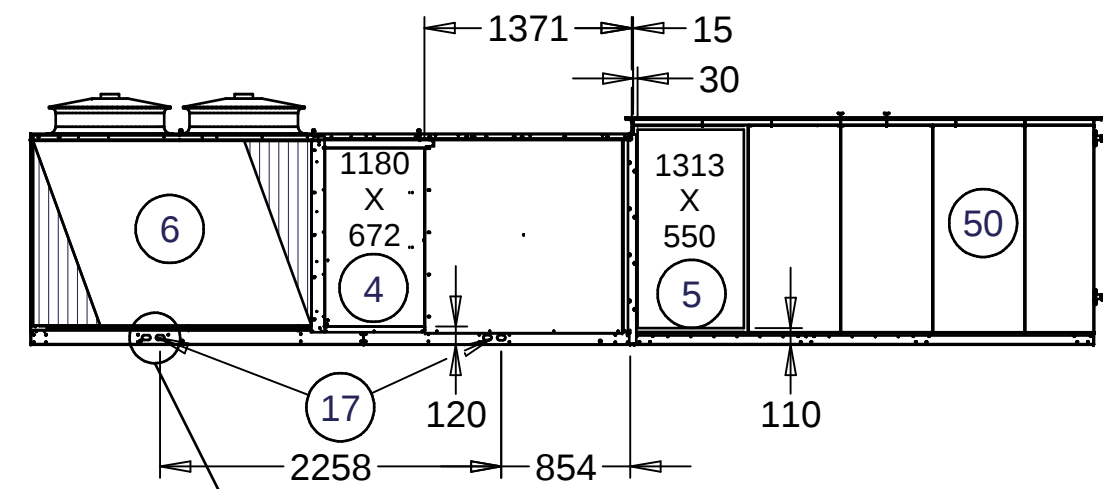
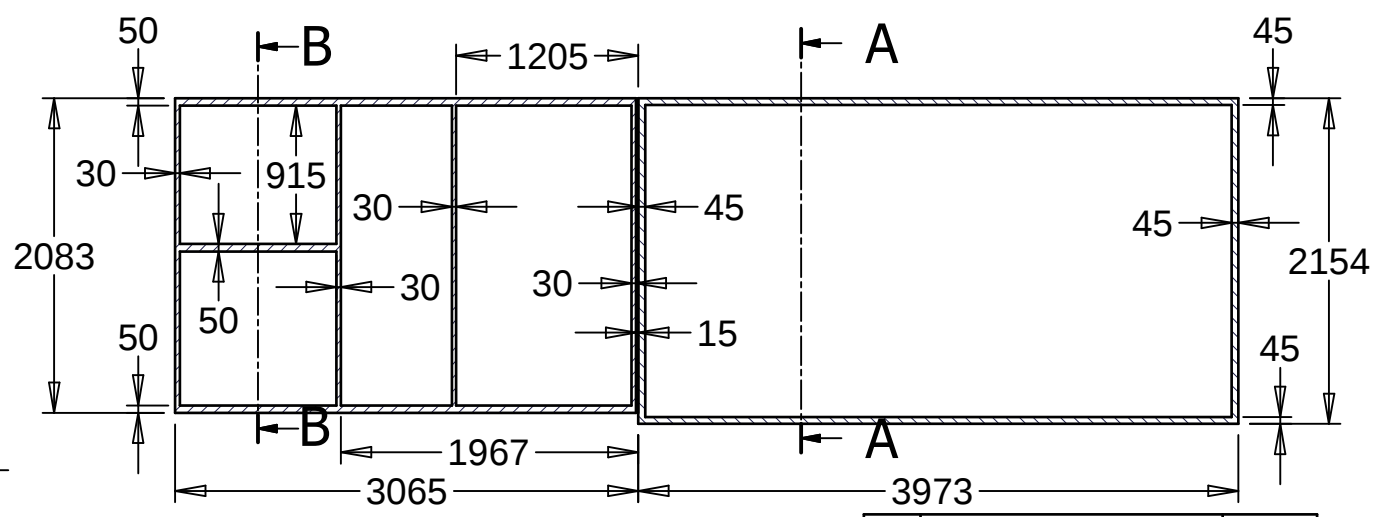
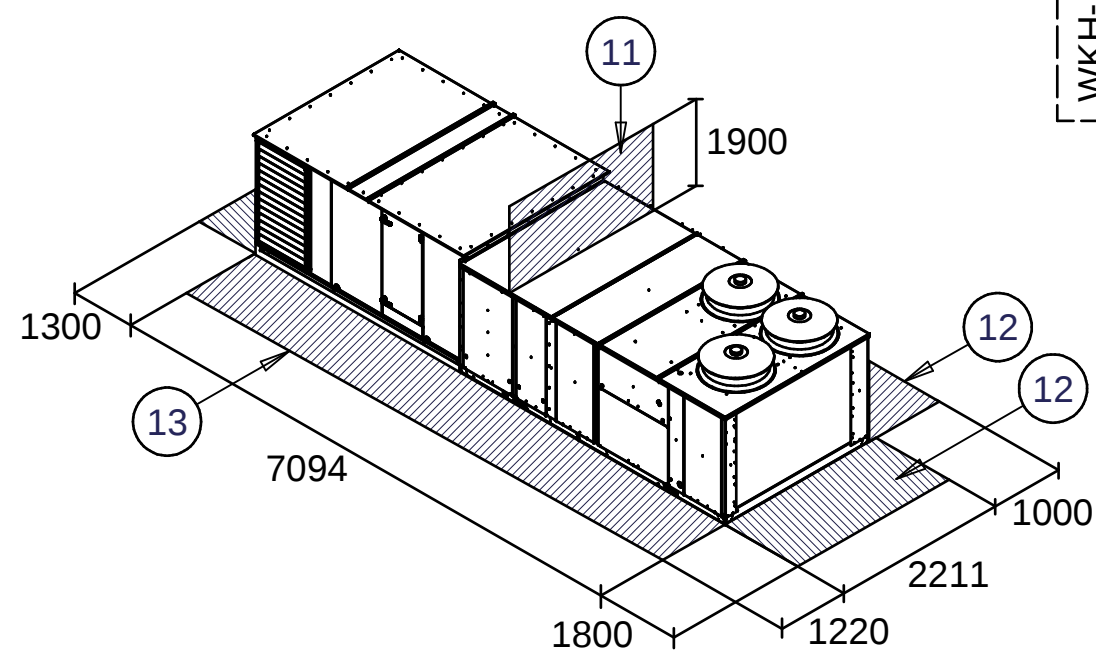
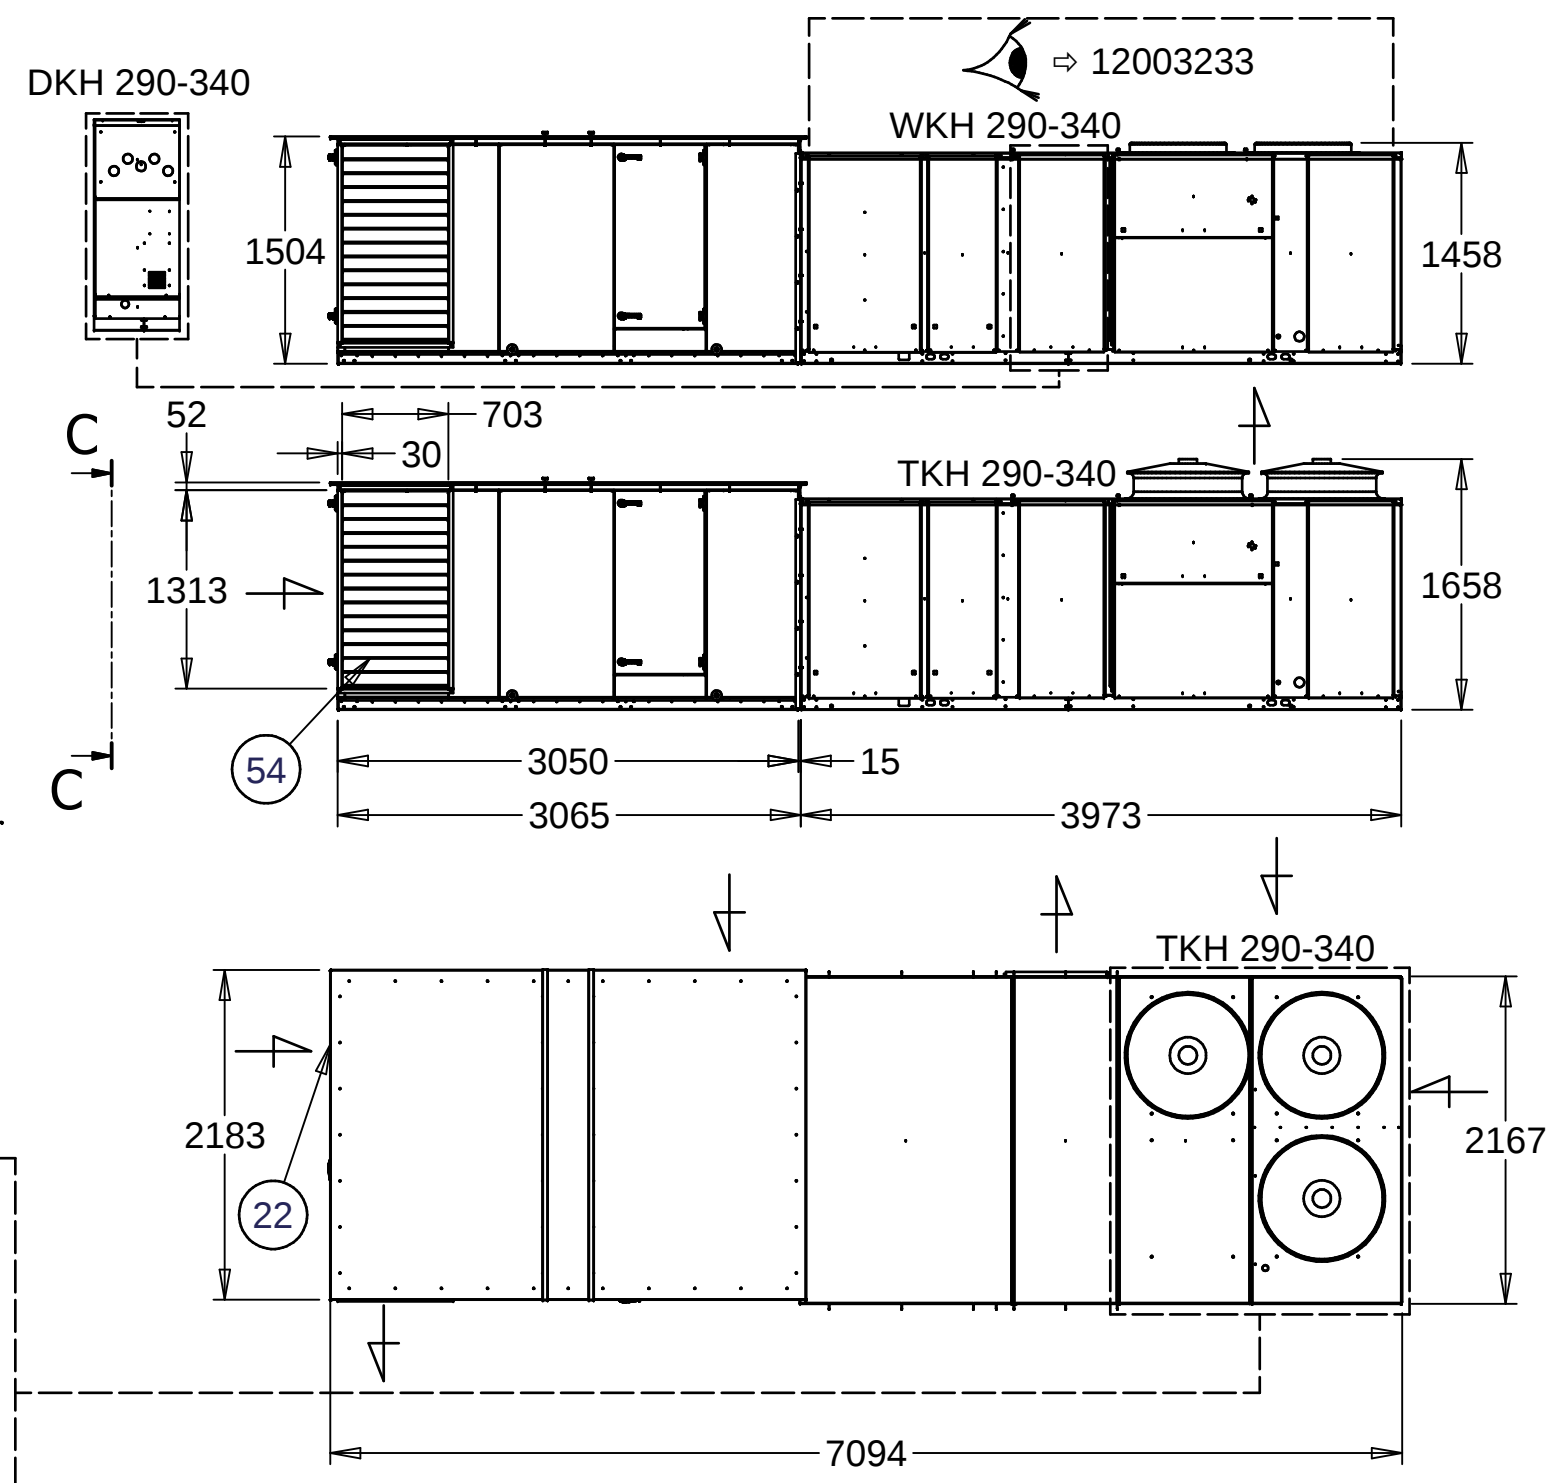
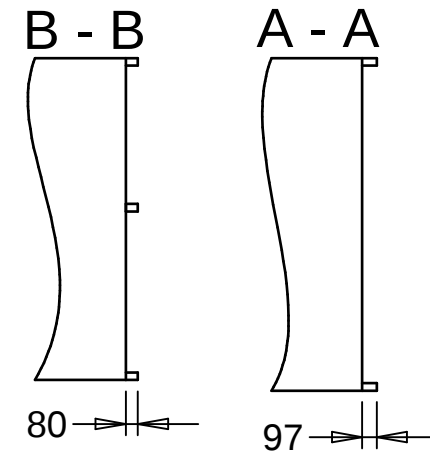
 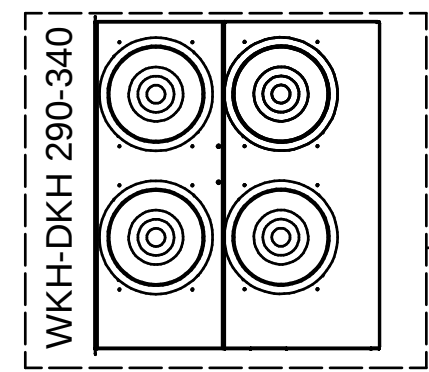


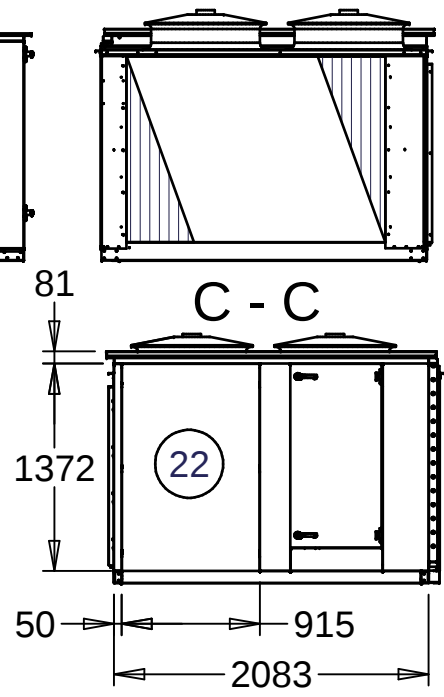

		1 kg	52 kg	53 kg
	#			
TKH	290	1140	1000	2140
	340	1148	1000	2148
WKH	290	1183	1000	2183
	340	1191	1000	2191
DKH	290	1268	1000	2268
	340	1276	1000	2276



	TKH-WKH-DKH 290-340 PLATE HEAT EXCHANGER		C	12001938	2 / 2
			Date : 30-JAN-2013		Rev : C
					Std

ITEM	FRANCAIS	DEUTSCH	ENGLISH	ITEM	ITALIANO	NEDERLANDS	ESPANOL
(1)	POIDS DE L'UNITE ROOFTOP EN FONCTIONNEMENT (kg)	ROOFTOP BETRIEBSGEWICHT (kg)	ROOFTOP UNIT WORKING WEIGHT (kg)	(1)	PESO DELL ROOFTOP UNITA IN FUNZIONE (kg)	ROOFTOP BEDRIJFSGEWICHT (kg)	ROOFTOP UNIDAD DE PESO EN OPERACION (kg)
(4)	SOUFFLAGE D'AIR EVAPORATEUR	VERDAMPFER LUFTAUSBLAS	SUPPLY OPENING	(4)	MANDATA ARIA	TOEVOERLUCHT	DESCARGA DE AIRE
(5)	REPRISE D'AIR EVAPORATEUR	VERDAMPFER RUECKLUFT	RETURN OPENING	(5)	REPRISA ARIA	RETOURLUCHT	RETORNO DE AIRE
(6)	BATTERIE CONDENSEUR	HITZUNG VERFLUSSIGER	CONDENSER COIL	(6)	BATTERIA CONDENSATORE	WARMTEWISSELAAR	BATERIA CONDENSADOR
(11)	AIRE NECESSAIRE POUR SORTIE D'AIR CONDENSEUR	MINDEST WANDABSTAND LUFTAUSTRITT	MINIMUM CLEARANCE AIR OUTLET	(11)	SPAZIO RICHIESTO PER ARIA INUSCITA	MINIMALE VRIJE RUIMTE VOOR LUCHTUITLATT	ESPACIO LIBRE MINIMO PARA SALIDA DE AIRE
(12)	AIRE NECESSAIRE POUR ENTREE D'AIR CONDENSEUR	MINDEST WANDABSTAND LUFTEINTRITT	MINIMUM CLEARANCE AIR INLET	(12)	SPAZIO RICHIESTO PER ARIA ENTRATA	MINIMALE VRIJE RUIMTE VOOR LUCHTINLATT	ESPACIO LIBRE MINIMO PARA TOME DE AIRE
(13)	AIRE CONSEILLEE POUR MAINTENANCE	MINDEST WANDABSTAND ZUR WARTUNG	MINIMUM CLEARANCE FOR MAINTENANCE	(13)	SPAZIO RICHIESTO PER MANUTENZIONE	MINIMALE VRIJE RUIMTE VOOR ONDERHOUD	ESPACIO LIBRE MINIMO PARA MANTENIMIENTO
(17)	TROUS DE LEVAGE	LOECHER FÜR HEBEZEUG	LIFTING HOLES	(17)	PUNTI DI SOLLEVAMENTO	HIJSPUNTEN	PUNTO DE ELEVACION
(22)	AIR FRAIS	FRISCHLUFT	FRESH AIR	(22)	PROTZIONE (RIPRESA ARIA ESTERNA)	BUITENLUCHT	AIRE FRESCO
(50)	PHE MODULE	PHE MODULE	PHE MODULE	(50)	PHE MODULO	PHE MODULE	MODULO PHE
(52)	POIDS DU MODULE PHE EN FONCTIONNEMENT (kg)	PHE MODULE BETRIEBSGEWICHT (kg)	PHE MODULE WORKING WEIGHT (kg)	(52)	PESO DELL PHE MODULO IN FUNZIONE (kg)	PHE MODULE BEDRIJFSGEWICHT (kg)	MODULO PHE DE PESO EN OPERACION (kg)
(53)	POIDS DE L'UNITE	BETRIEBSGEWICHT (kg)	UNIT WORKING	(53)	PESO DELL UNITA	BEDRIJFSGEWICHT (kg)	PESO EN OPERACION (kg)
(54)	HOTTE D'EXTRACTION	DUNSTABZUGSHAUBE	EXHAUST HOOD	(54)	CAPP DI TORE ESPULSIONE	DAMPKAP	CAMPANA DE ESCAPE
	ENTREE D'AIR SORTIE D'AIR	LUFTEINTRITT LUFTAUSTRITT	AIR ENTRY AIR EXHAUST		ENTRATA ARIA USCITA ARIA	LUCHTINLAAT LUCHTUITLAAT	ENTRADA DE AIRE SALIDA DE AIRE