 


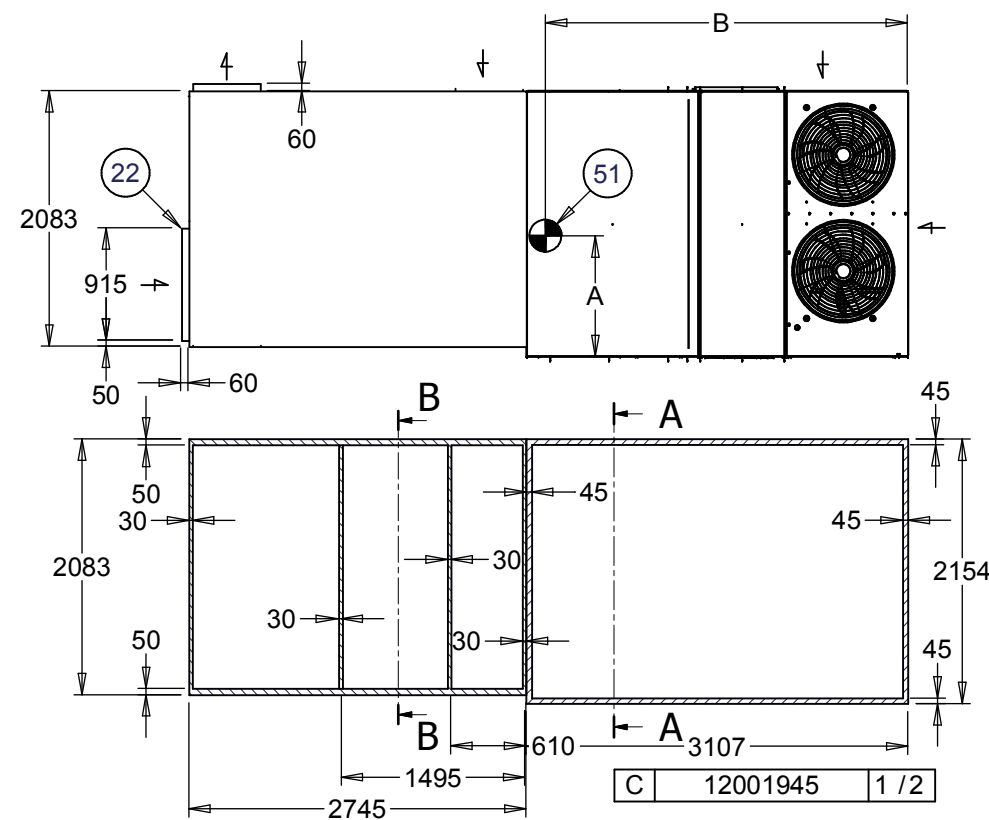
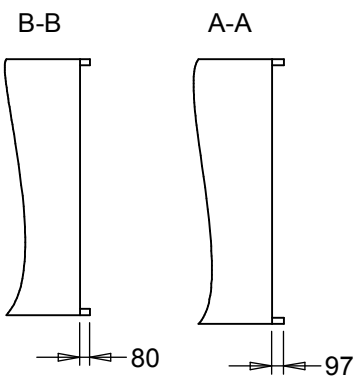
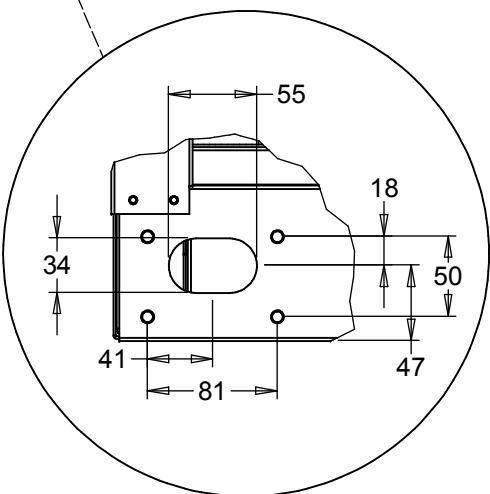
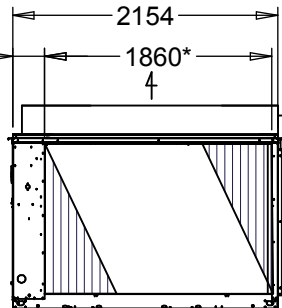
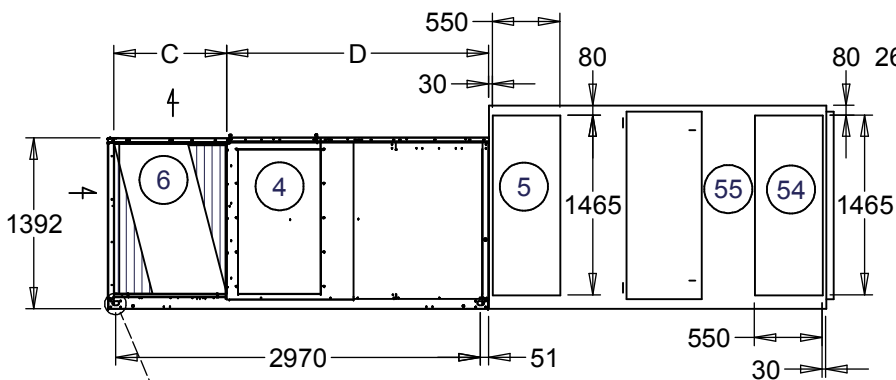


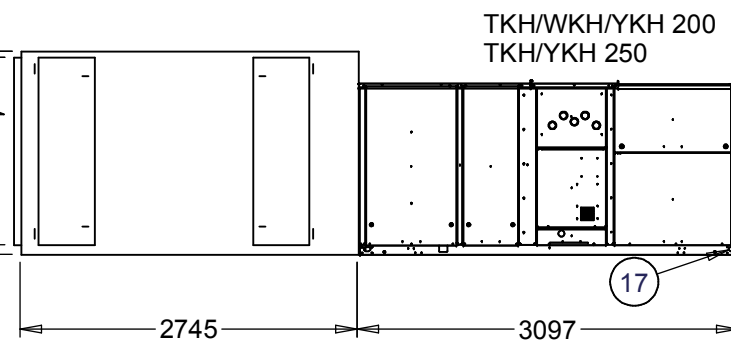

TKH 200-250-265
WKH 200-265
ENERGY RECOVERY WHEEL

C	12001945	1 / 2
Date : 03-MAR-2010	Rev : A	
	Std	

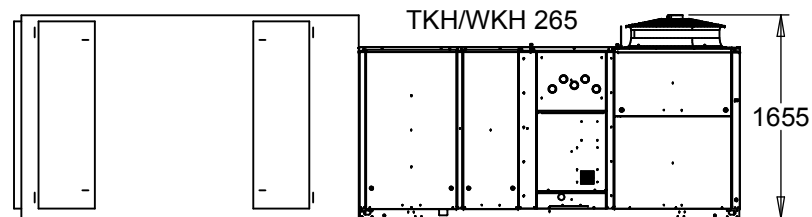

		1 kg	56 kg	53 kg	51 mm		
	#				A	B	C
TKH	200	853	906	1759	983	2947	640
	250	881	906	1787	981	2934	910
WKH	200	889	906	1795	1006	2927	910
	265	894	906	1800	1023	2922	910
YKH	200	932	906	1838	977	2877	640
	250	961	906	1867	975	2866	910

	TKH 200-250-265 WKH 200-265 ENERGY RECOVERY WHEEL	C	12001945	2 / 2
		Date : 03-MAR-2010		Rev : A
			Std	

ITEM	FRANCAIS	DEUTSCH	ENGLISH
(1)	POIDS DE L'UNITE ROOFTOP EN FONCTIONNEMENT (kg)	ROOFTOP BETRIEBSGEWICHT (kg)	ROOFTOP UNIT WORKING WEIGHT (kg)
(4)	SOUFFLAGE D'AIR EVAPORATEUR	VERDAMPFER LUFTAUSSLAS	SUPPLY OPENING
(5)	REPRISE D'AIR EVAPORATEUR	VERDAMPFER RUECKLUFT	RETURN OPENING
(6)	BATTERIE CONDENSEUR	HITZUNG VERFLUSSIGER	CONDENSER COIL
(17)	TROUS DE LEVAGE	LOECHER FÜR HEBEZEUG	LIFTING HOLES
(22)	HOTTE D'AIR FRAIS	FRISCHLUFTHAUBE	FRESH AIR HOOD
(51)	CENTRE DE GRAVITE	SCHWERPUNKT	CENTER OF GRAVITY
(53)	POIDS DE L'UNITE EN FONCTIONNEMENT (kg)	BETRIEBSGEWICHT (kg)	UNIT WORKING WEIGHT (kg)
(54)	HOTTE D'EXTRACTION	DUNSTABZUGSHAUBE	EXHAUST HOOD
(55)	ERW MODULE	ERW MODULE	ERW MODULE
(56)	POIDS DE LE MODULE ERW EN FONCTIONNEMENT (kg)	ERW MODULE BETRIEBSGEWICHT (kg)	ERW MODULE WORKING WEIGHT (kg)
	ENTREE D'AIR SORTIE D'AIR	LUFTEINTRITT LUFTAustrITT	AIR ENTRY AIR EXHAUST

ITEM	ITALIANO	NEDERLANDS	ESPAÑOL
(1)	PESO DELL ROOFTOP UNITA IN FUNZIONE (kg)	ROOFTOP BEDRIJFSGEWICHT (kg)	ROOFTOP UNIDAD DE PESO EN OPERACION (kg)
(4)	MANDATA ARIA	TOEVOERLUCHT	DESCARGA DE AIRE
(5)	REPRISA ARIA	RETOURLUCHT	RETORNO DE AIRE
(6)	BATTERIA CONDENSATORE	WARMTEWISSELAAR	BATERIA CONDENSADOR
(17)	PUNTI DI SOLLEVAMENTO	HIJSPUNTEN	PUNTO DE ELEVACION
(22)	CAPP DI PROTZIONE (RIPRESA ARIA ESTERNA)	BUITENLUCHT KAP	CUBIERTA DE AIRE FRESCO
(51)	CENTRO DI GRAVITA	ZWAARTEPUNT	CENTRO DE GRAVEDAD
(53)	PESO DELL UNITA IN FUNZIONE (kg)	BEDRIJFSGEWICHT (kg)	PESO EN OPERACION (kg)
(54)	CAPP DI TORE ESPULSIONE	DAMPKAP	CAMPANA DE ESCAPE
(55)	ERW MODULO	ERW MODULE	MODULO ERW
(56)	PESO DELL ERW MODULO IN FUNZIONE (kg)	ERW MODULE BEDRIJFSGEWICHT (kg)	MODULO ERW DE PESO EN OPERACION (kg)
	ENTRATA ARIA USCITA ARIA	LUCHTINLAAT LUCHTUITLAAT	ENTRADA DE AIRE SALIDA DE AIRE